



1/30

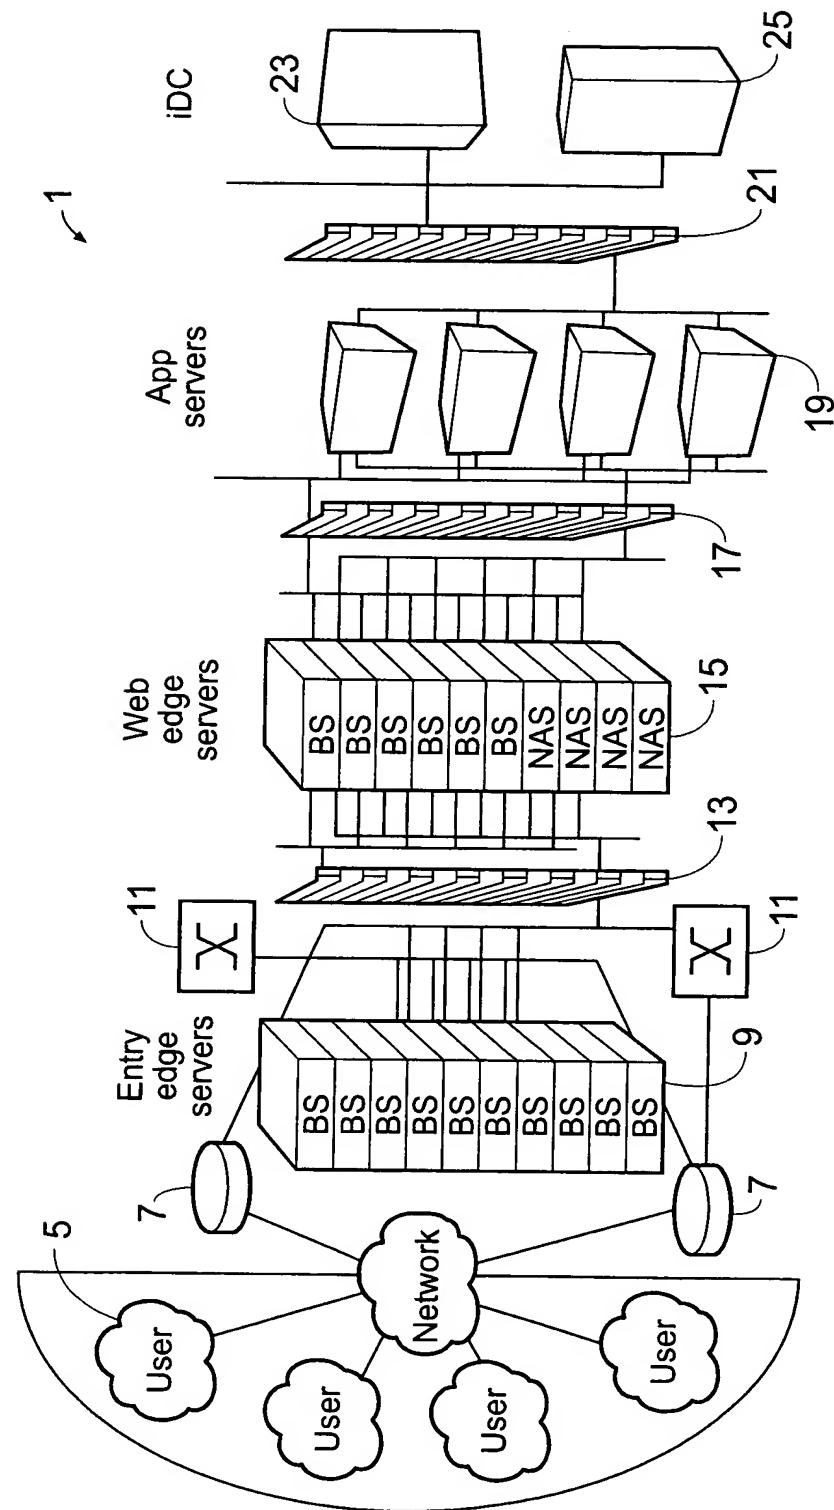


Fig. 1

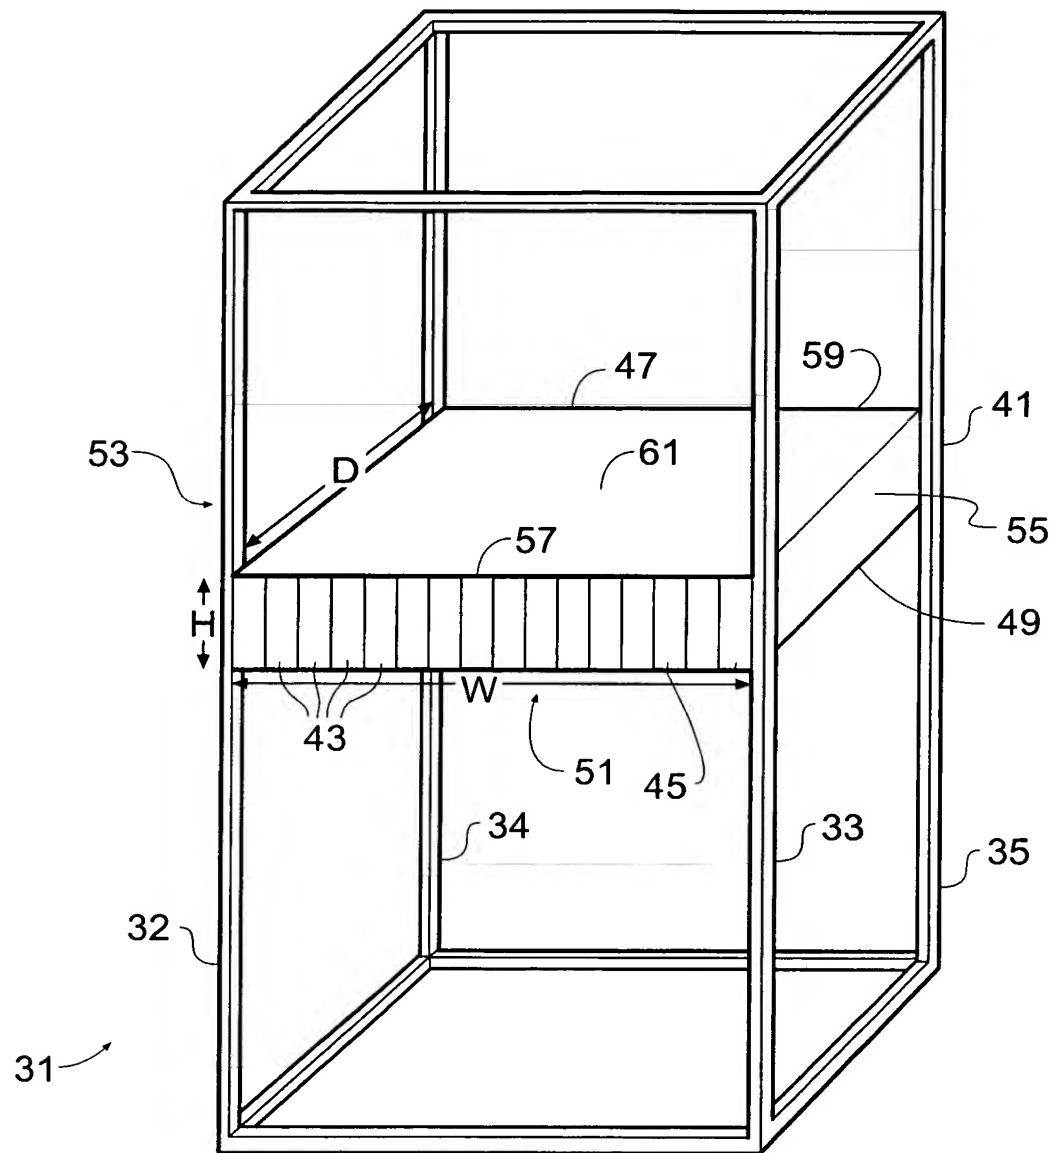
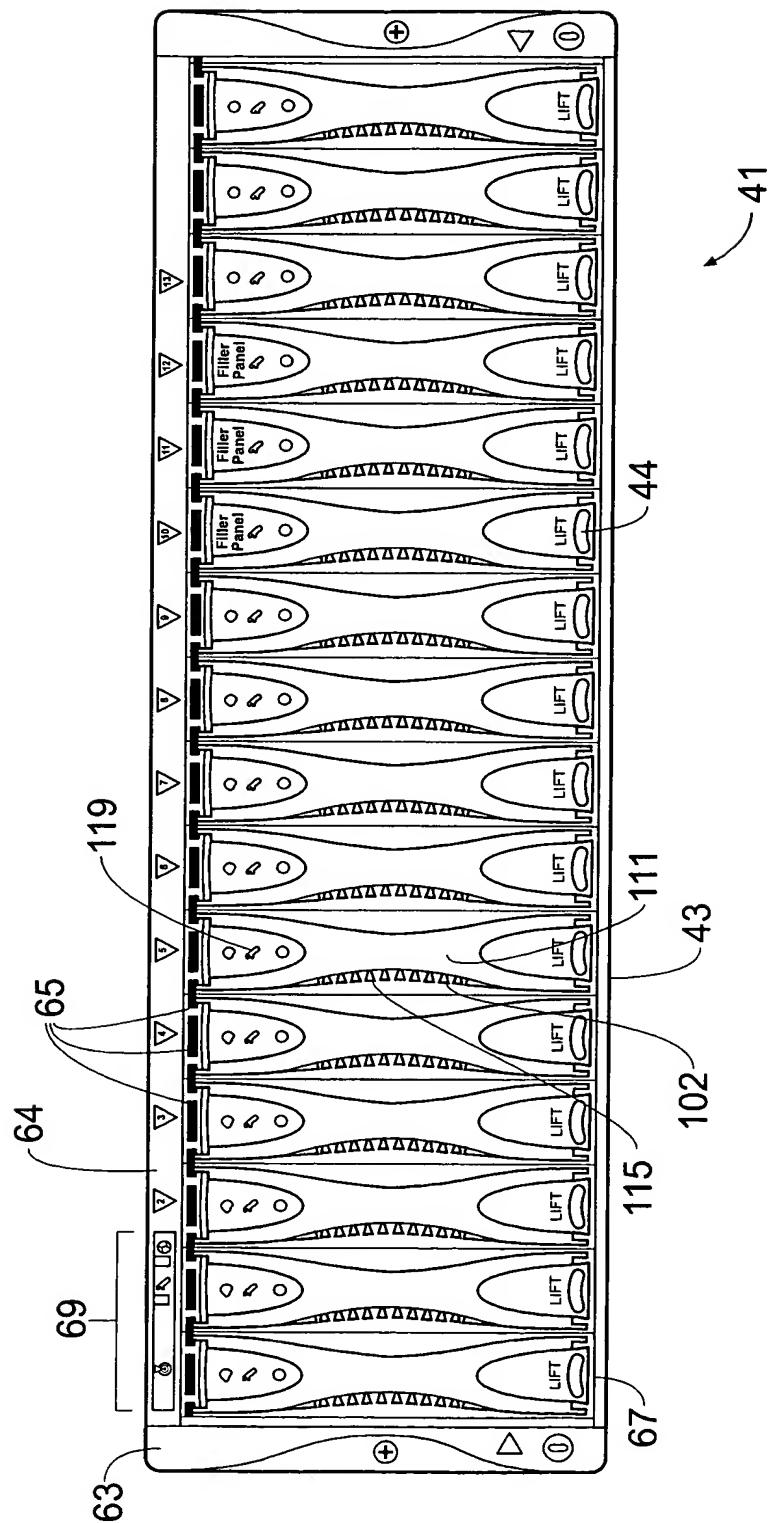


Fig. 2



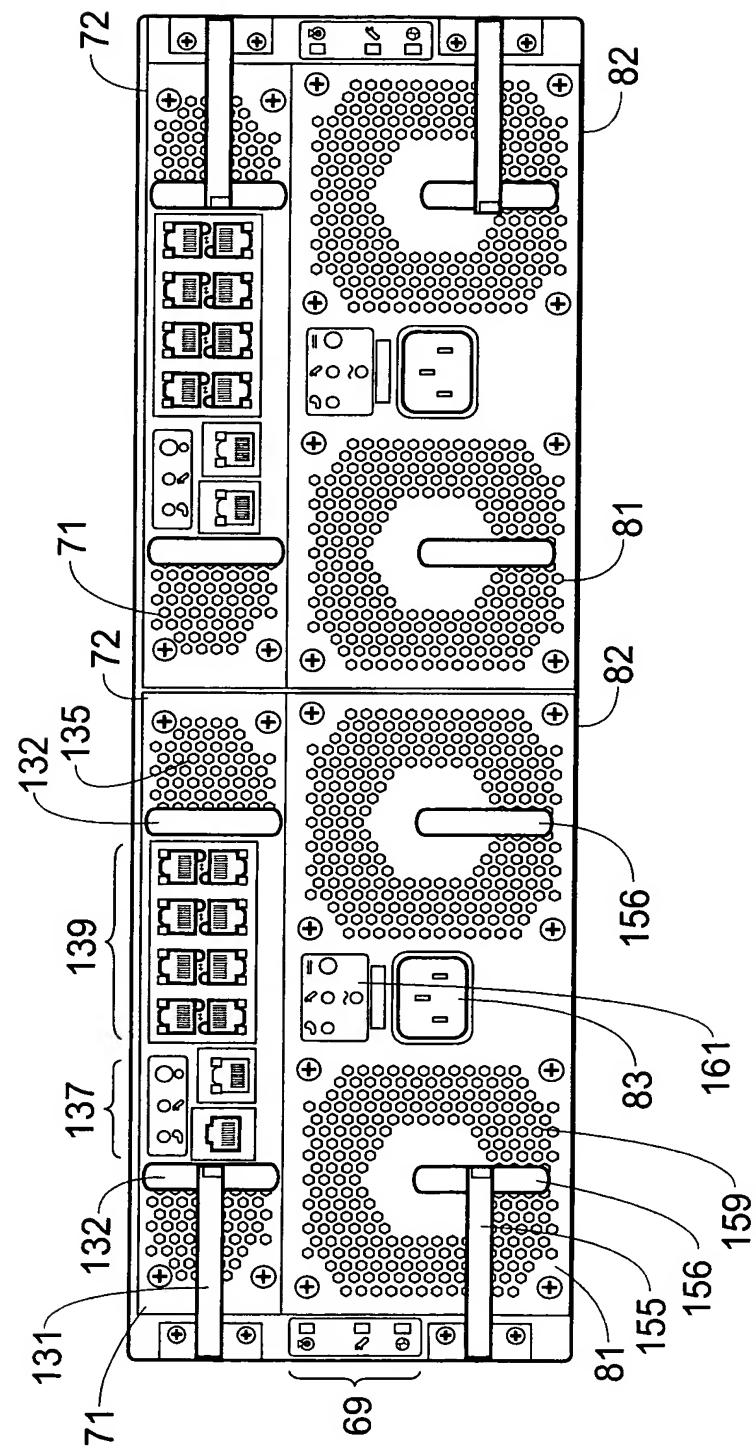


Fig. 4

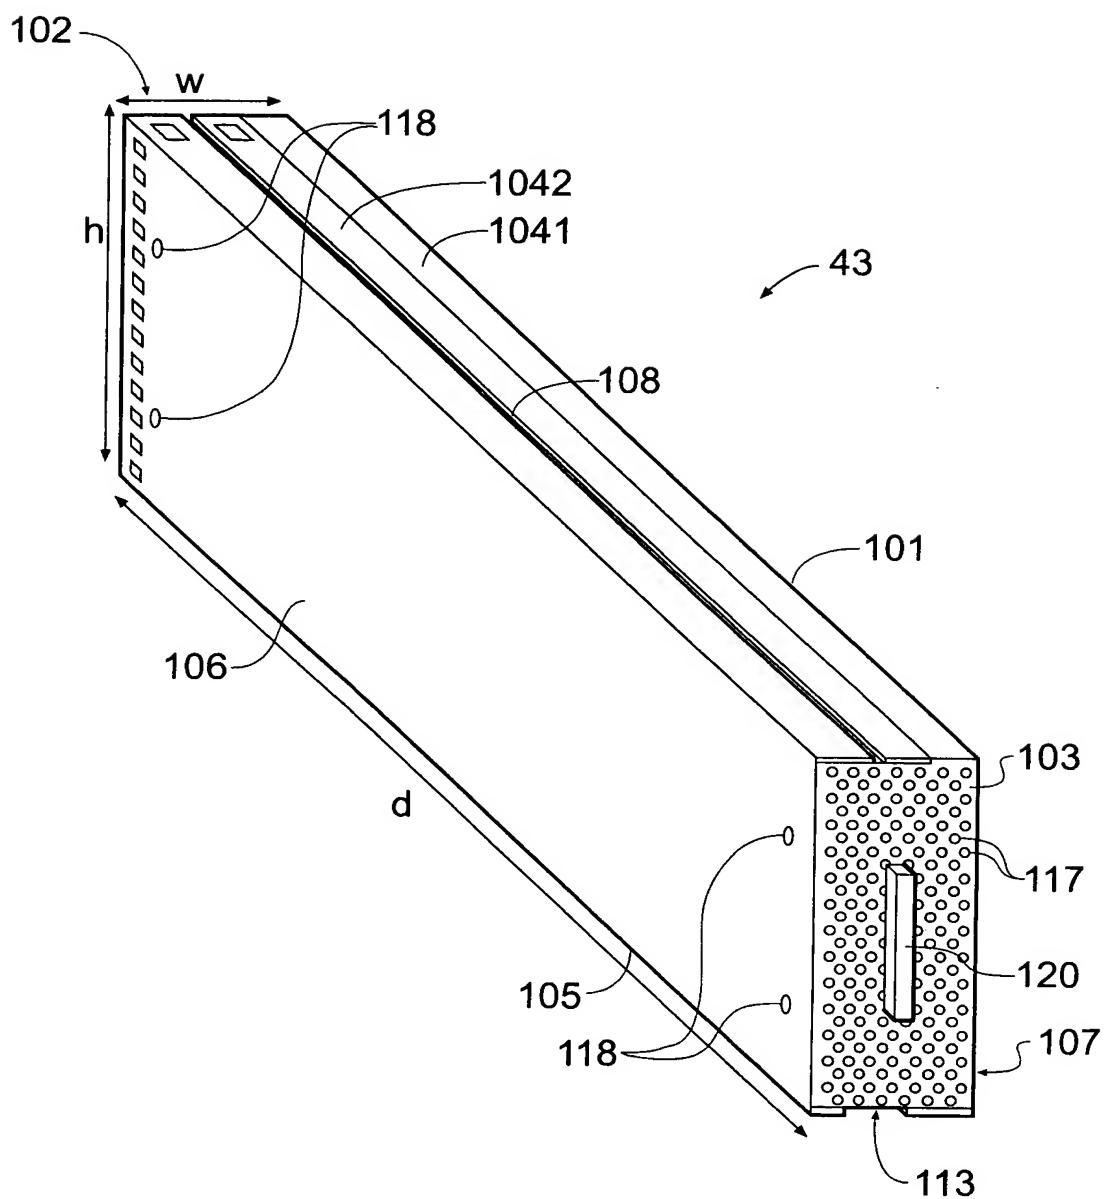


Fig. 5A

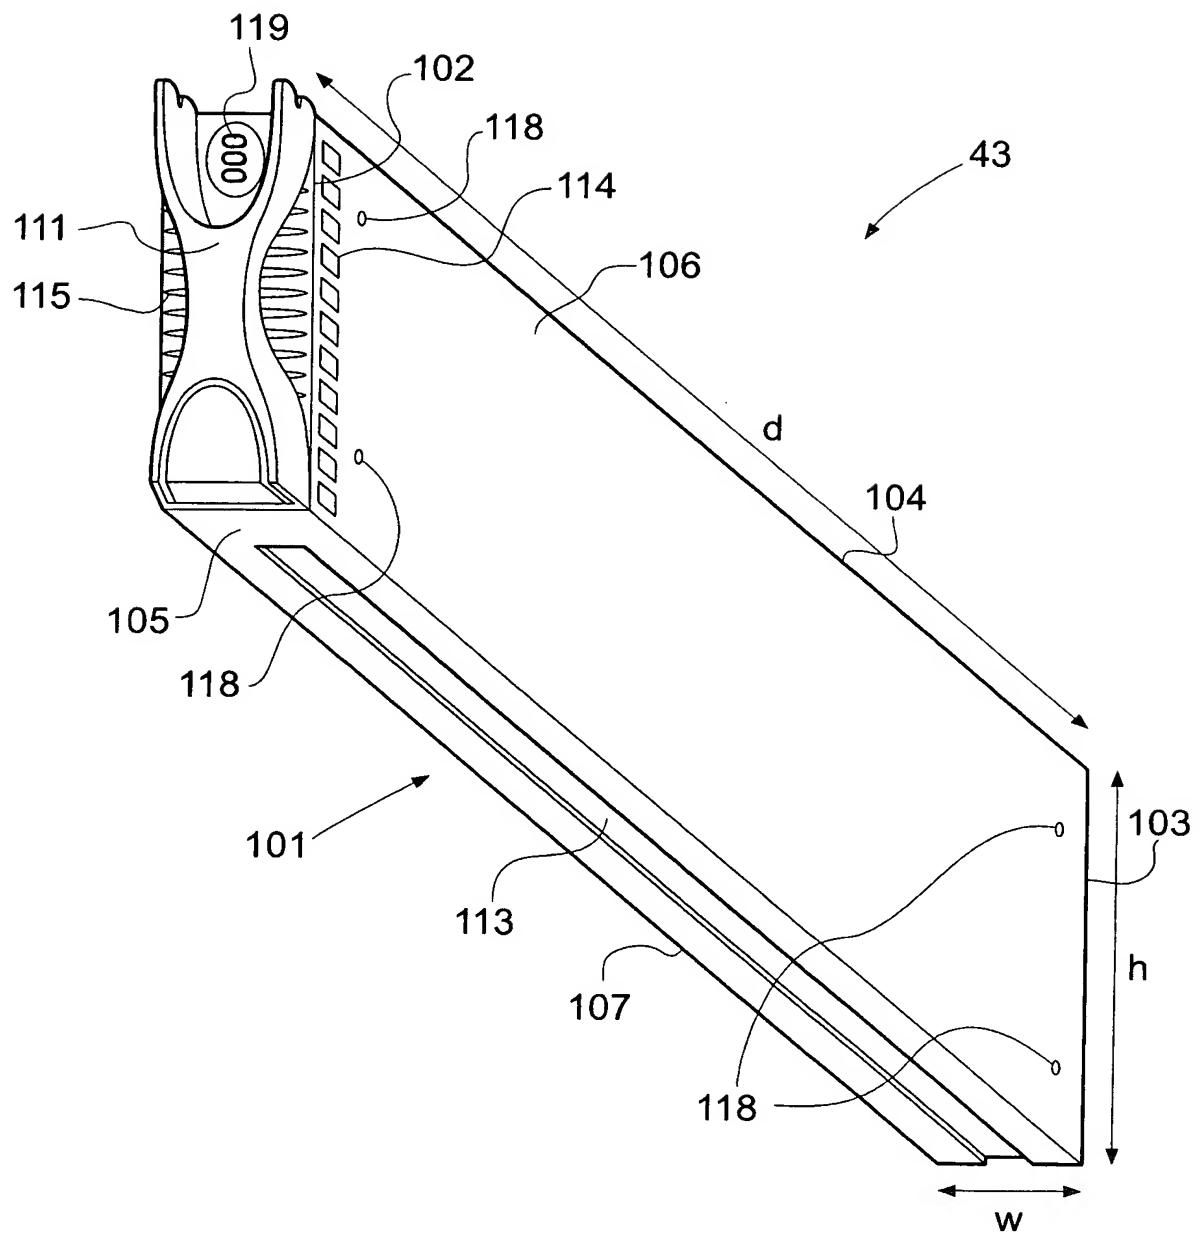


Fig. 5B

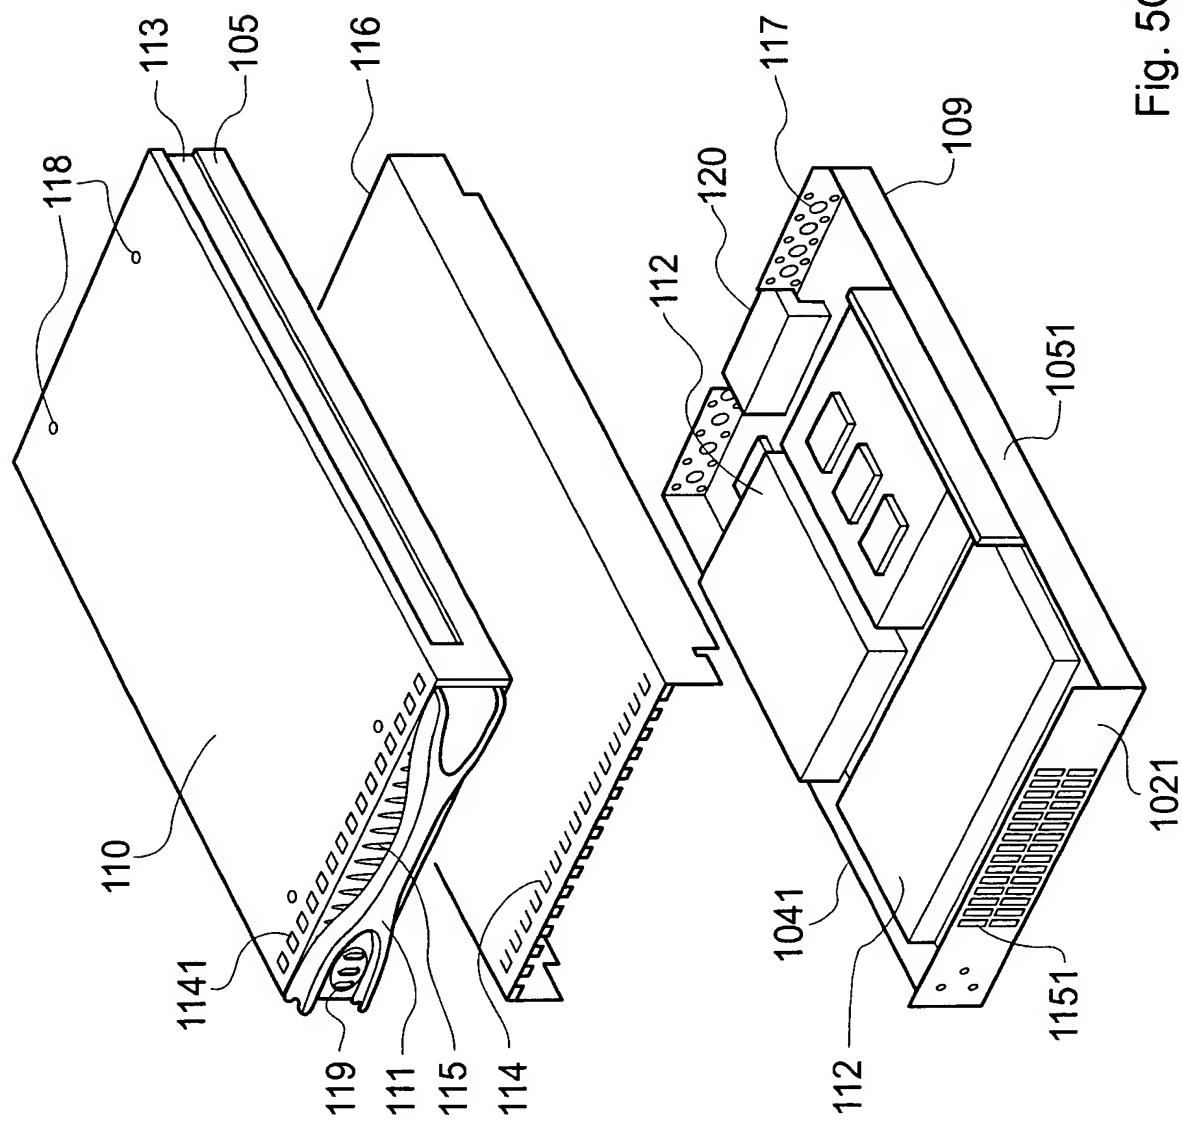


Fig. 5C

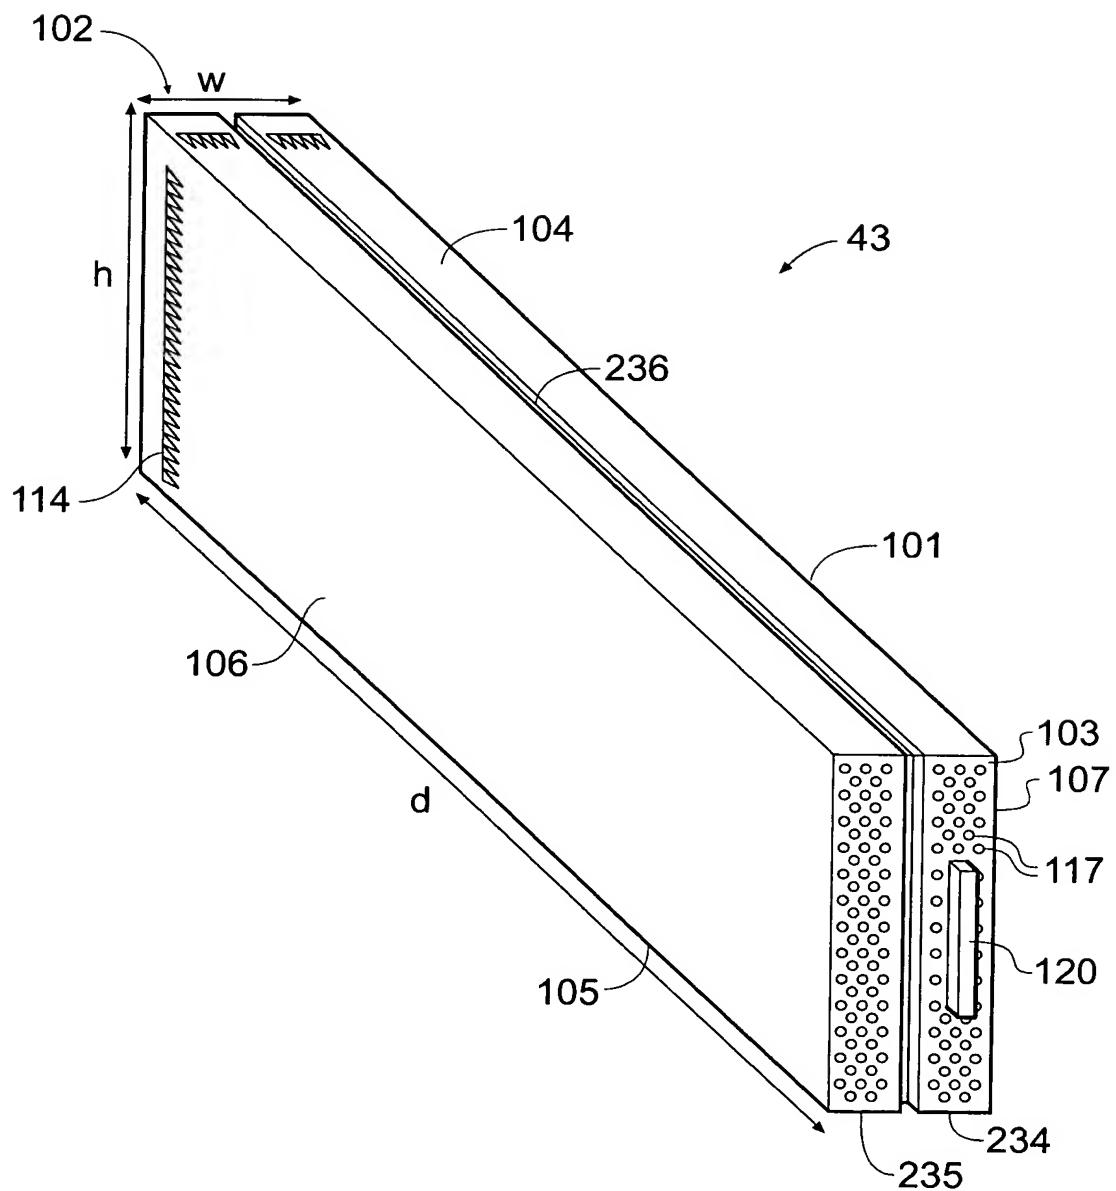


Fig. 5D

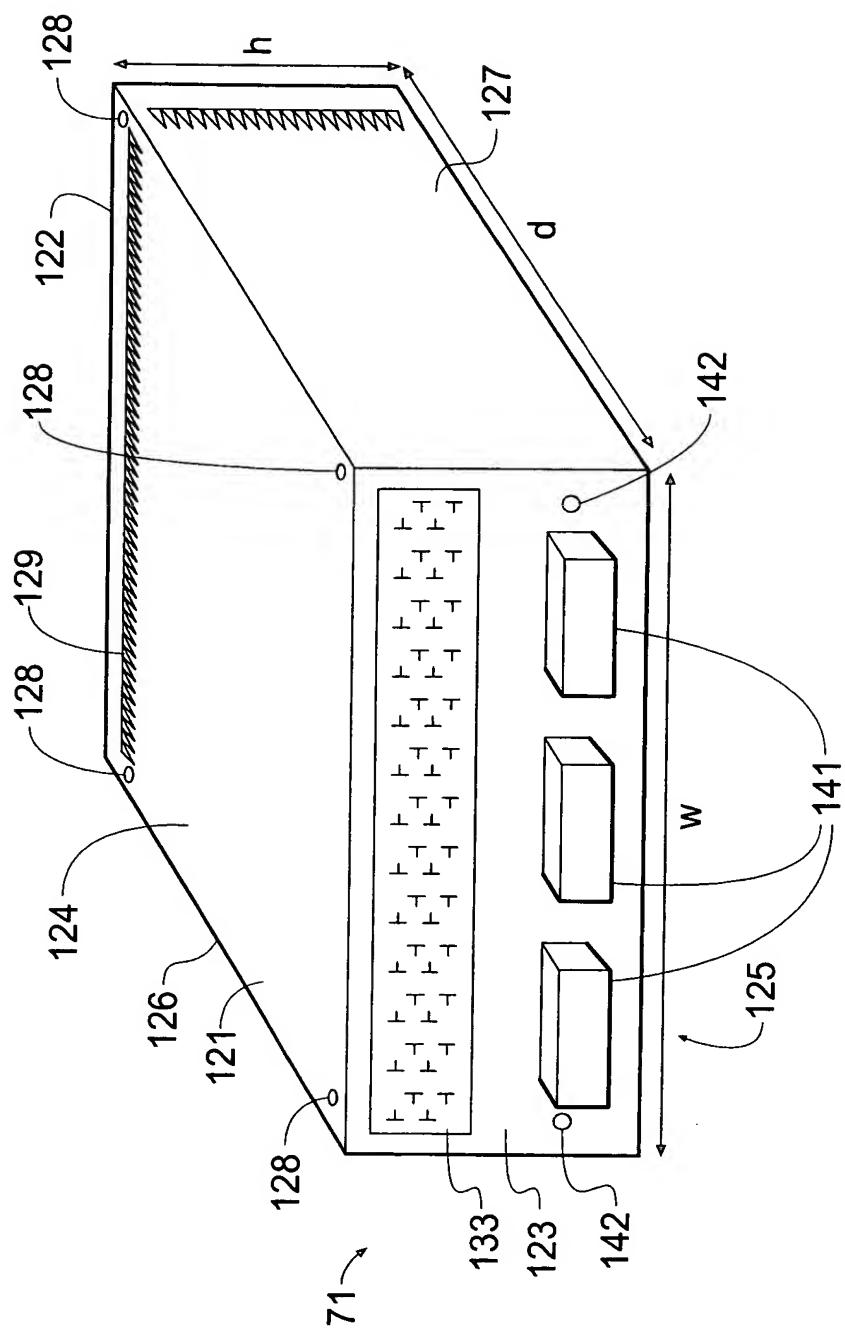


Fig. 6

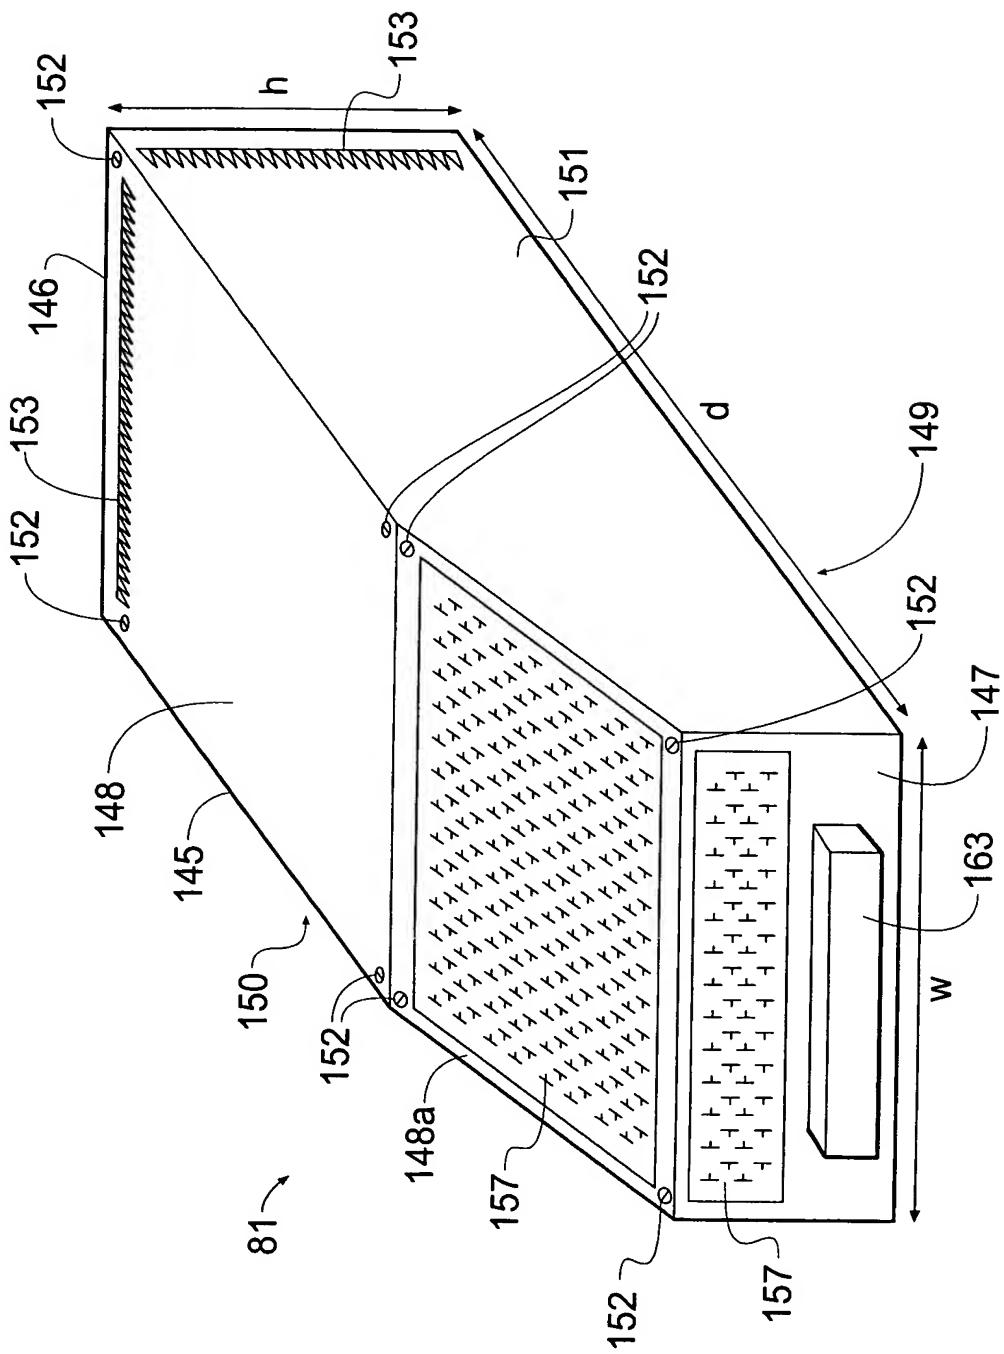


Fig. 7

11/30

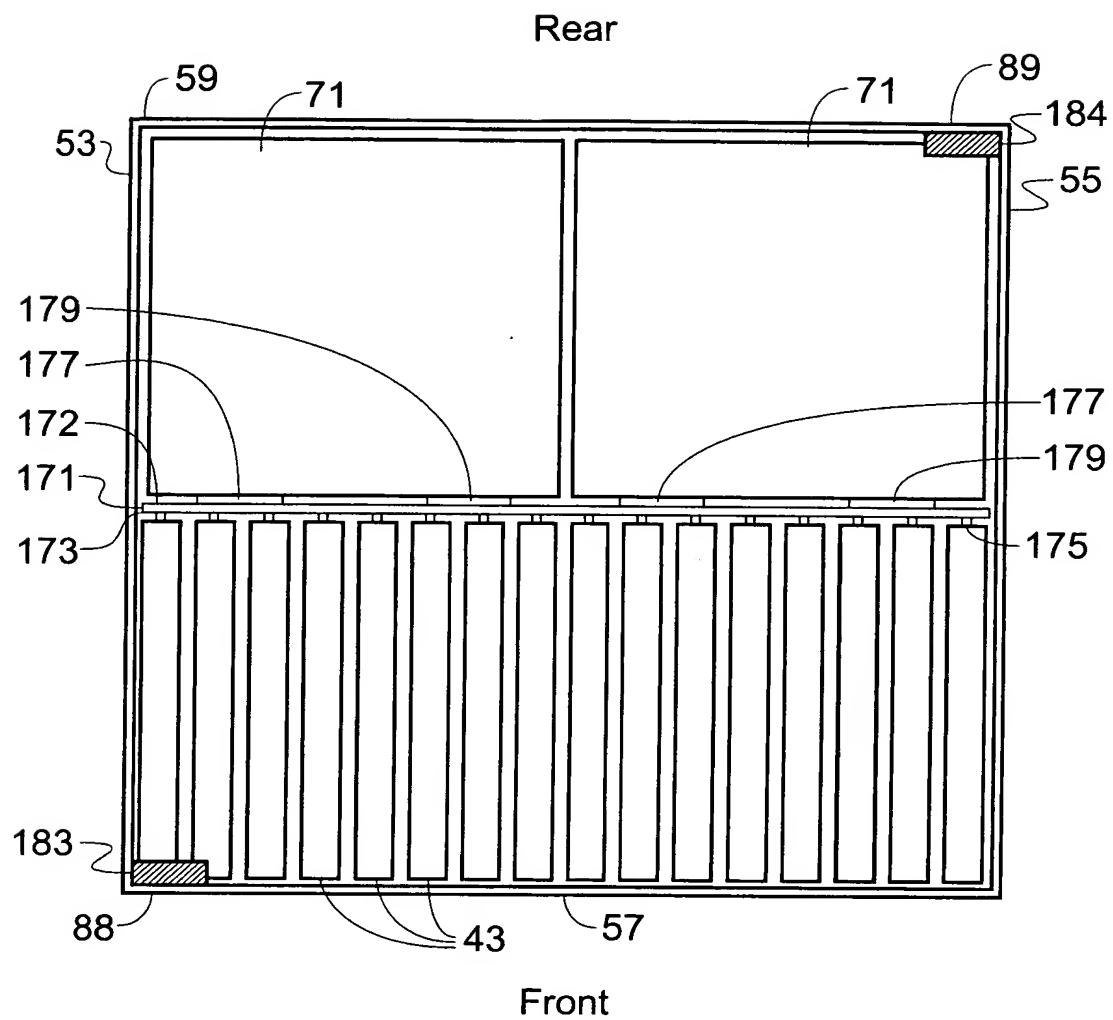


Fig. 8A

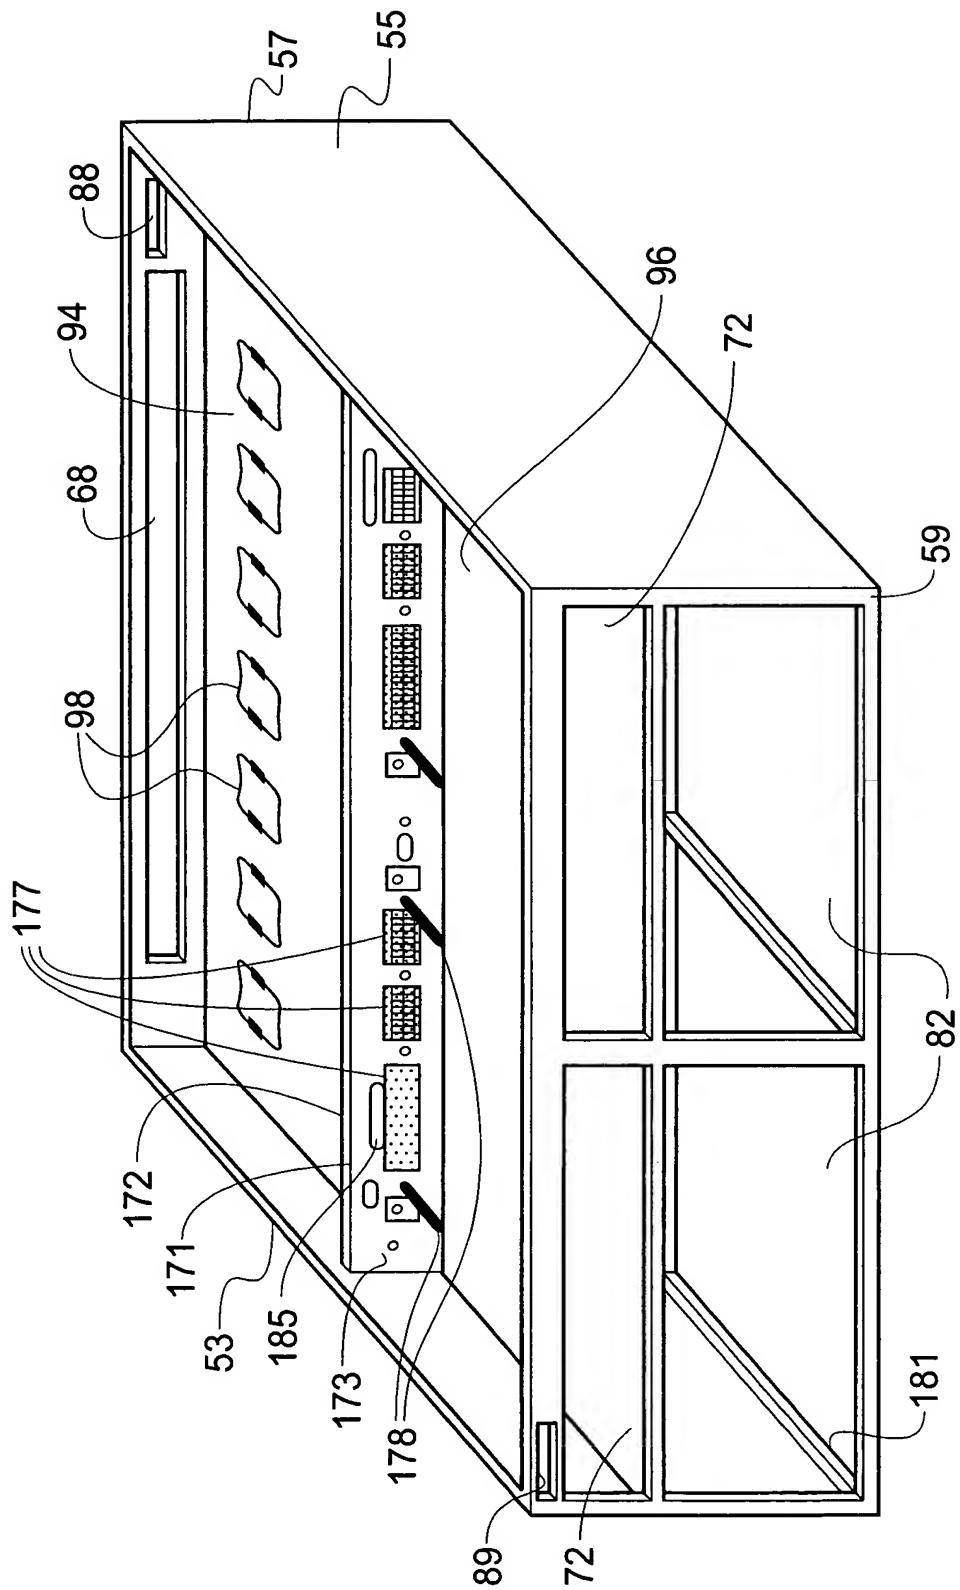


Fig. 8B

13/30

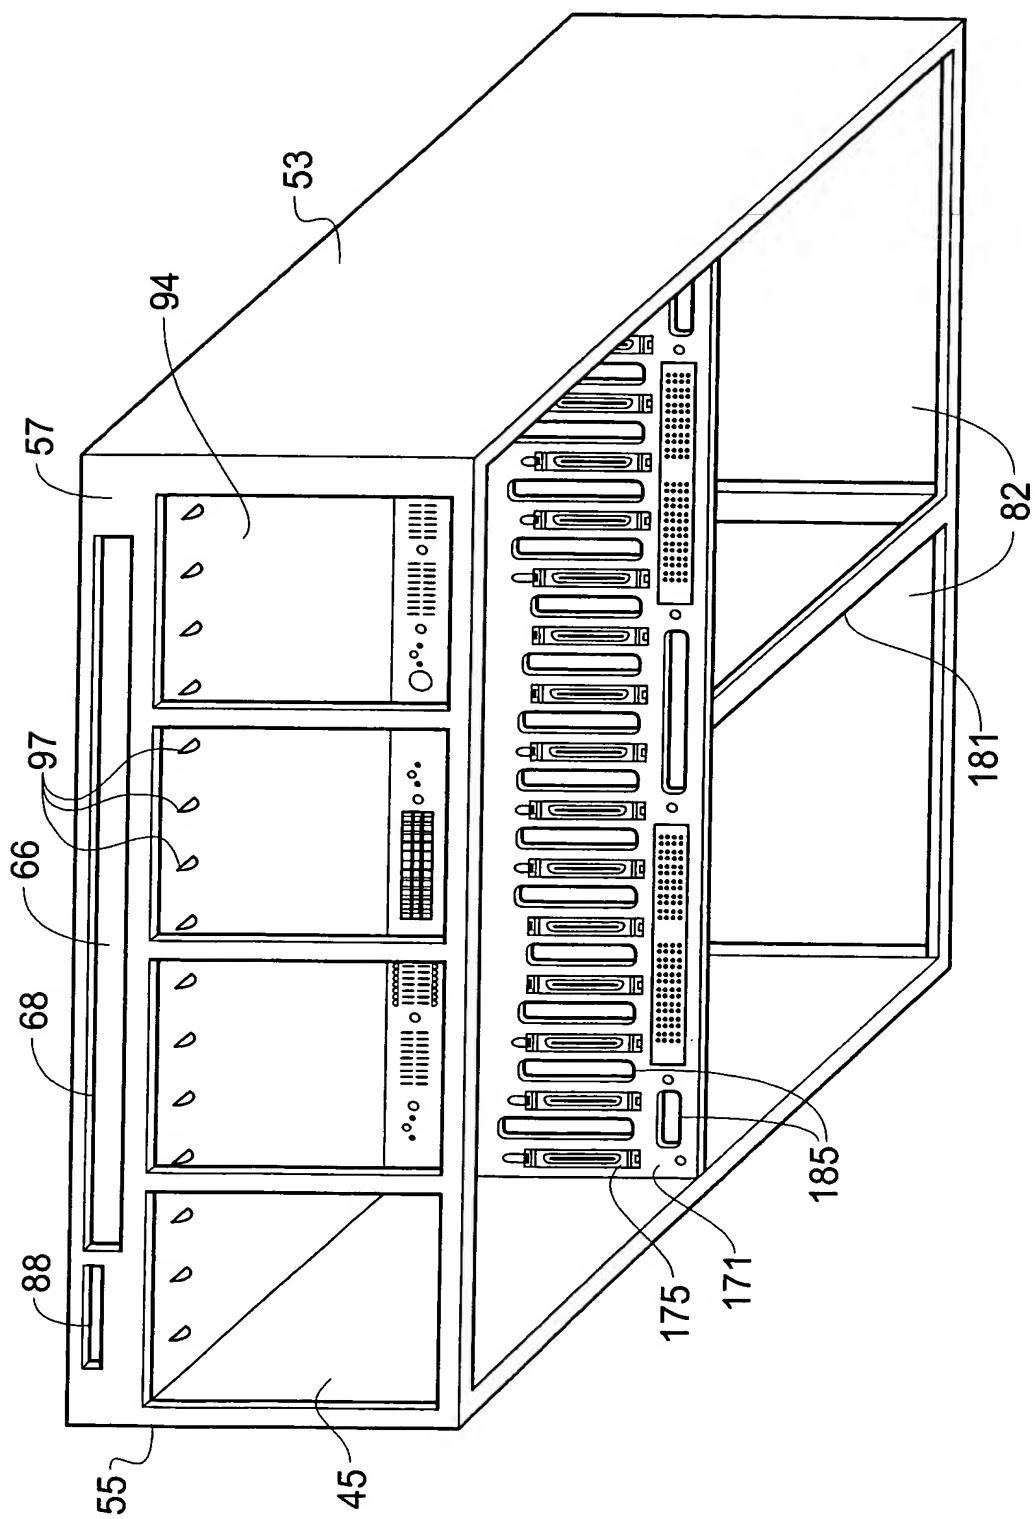


Fig. 8C

14/30

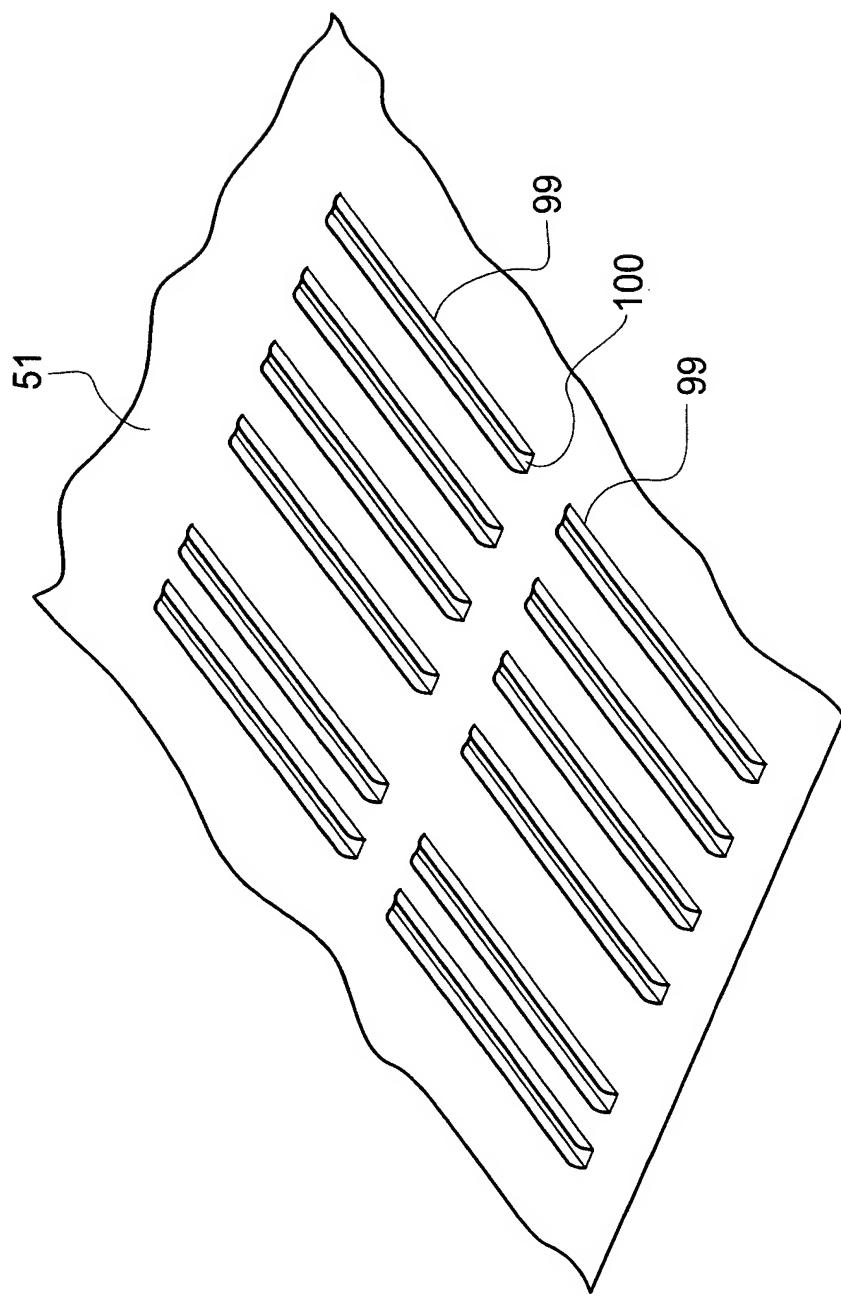


Fig. 8D

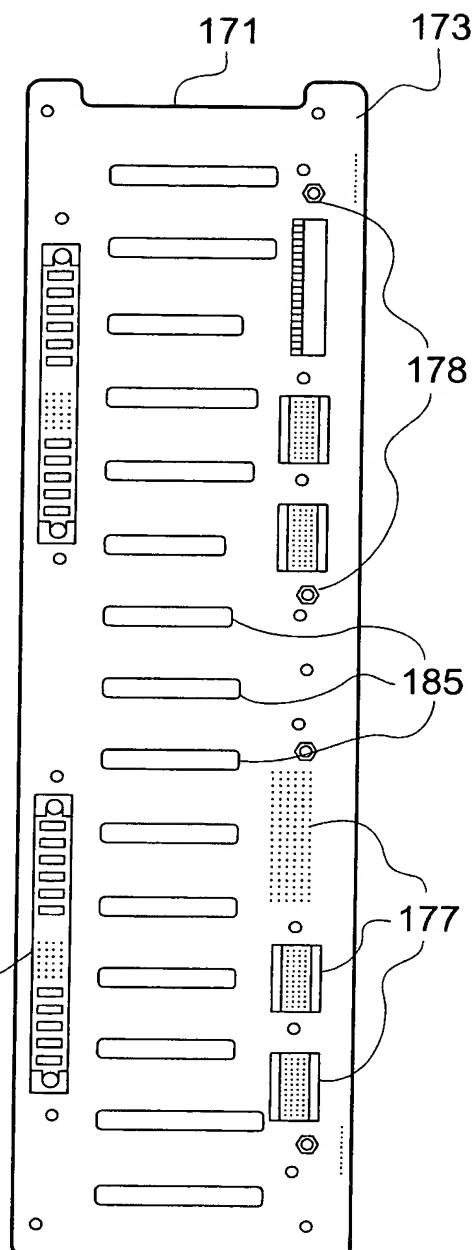
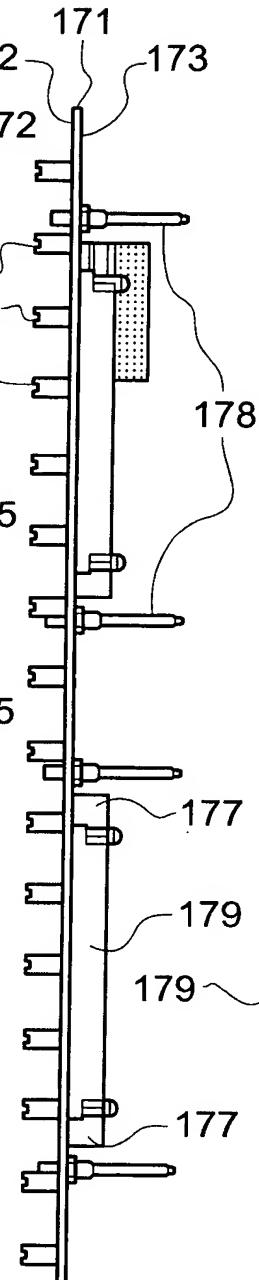
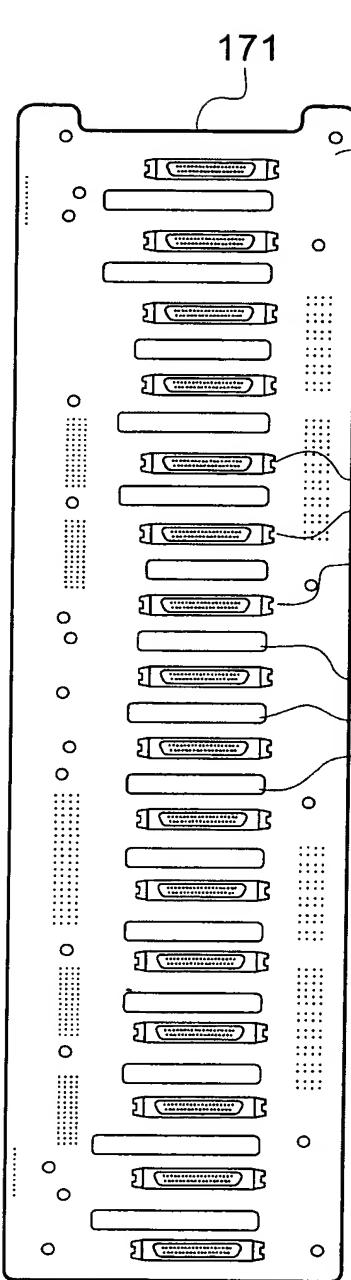


Fig. 9A

Fig. 9B

Fig. 9C

16/30



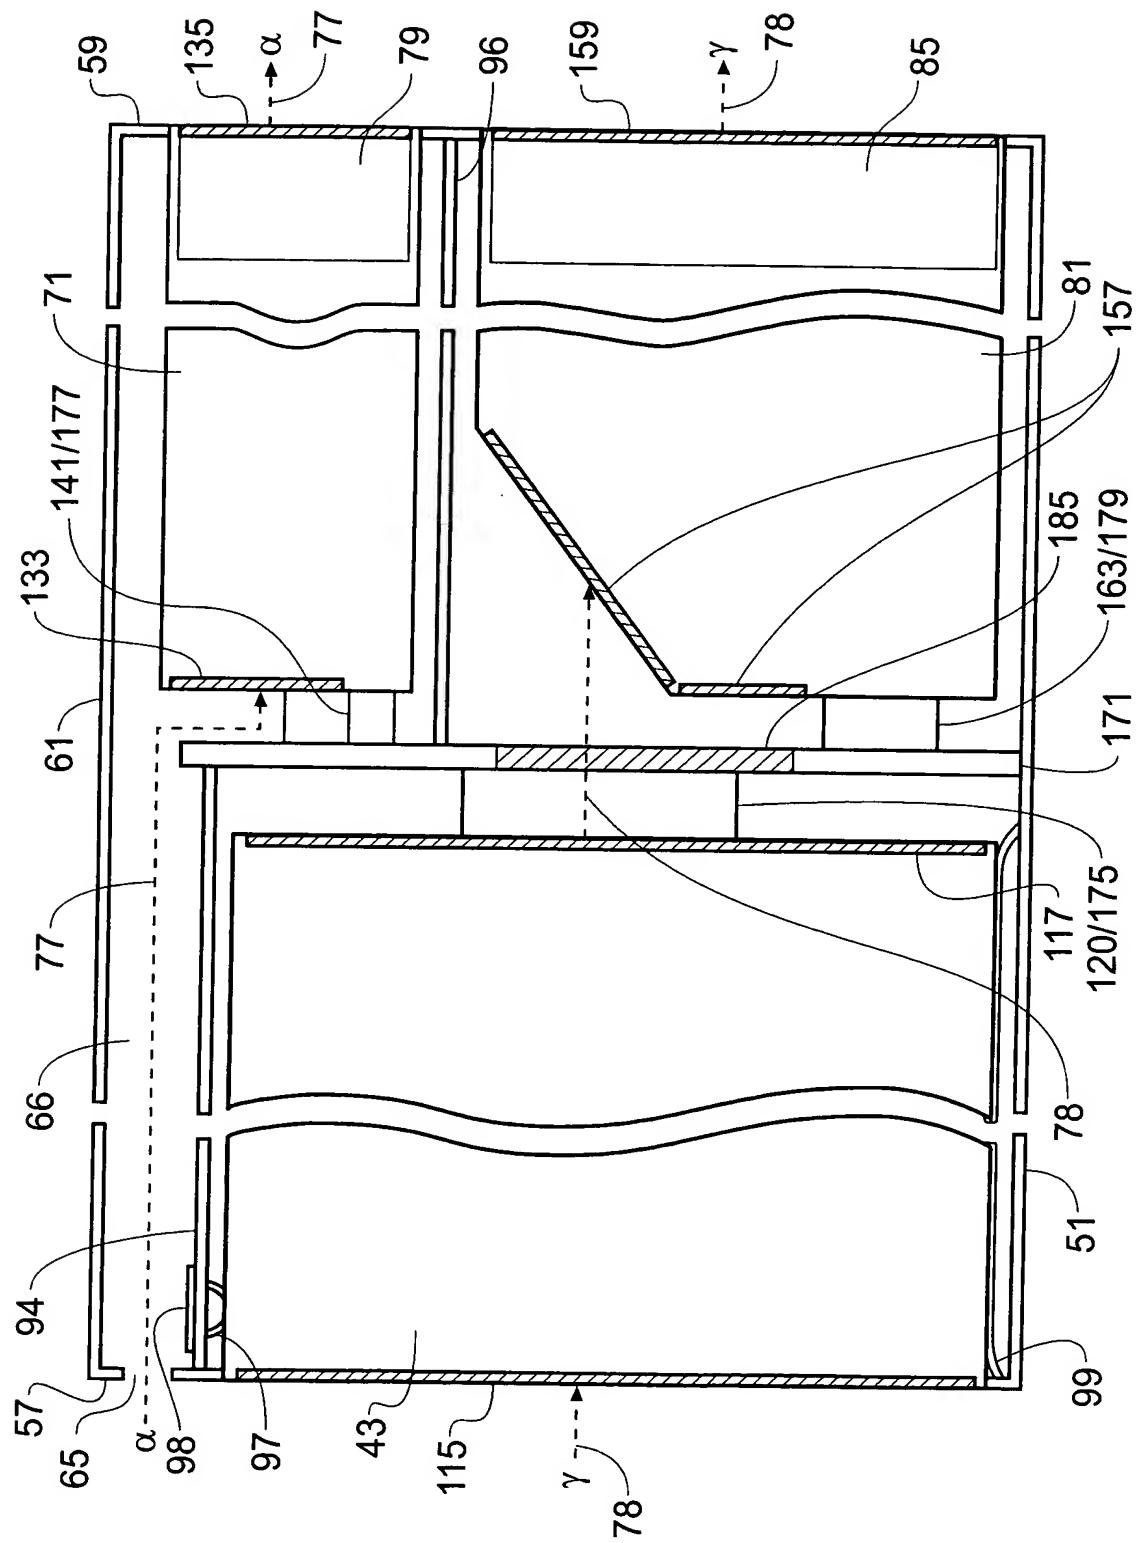


Fig. 10

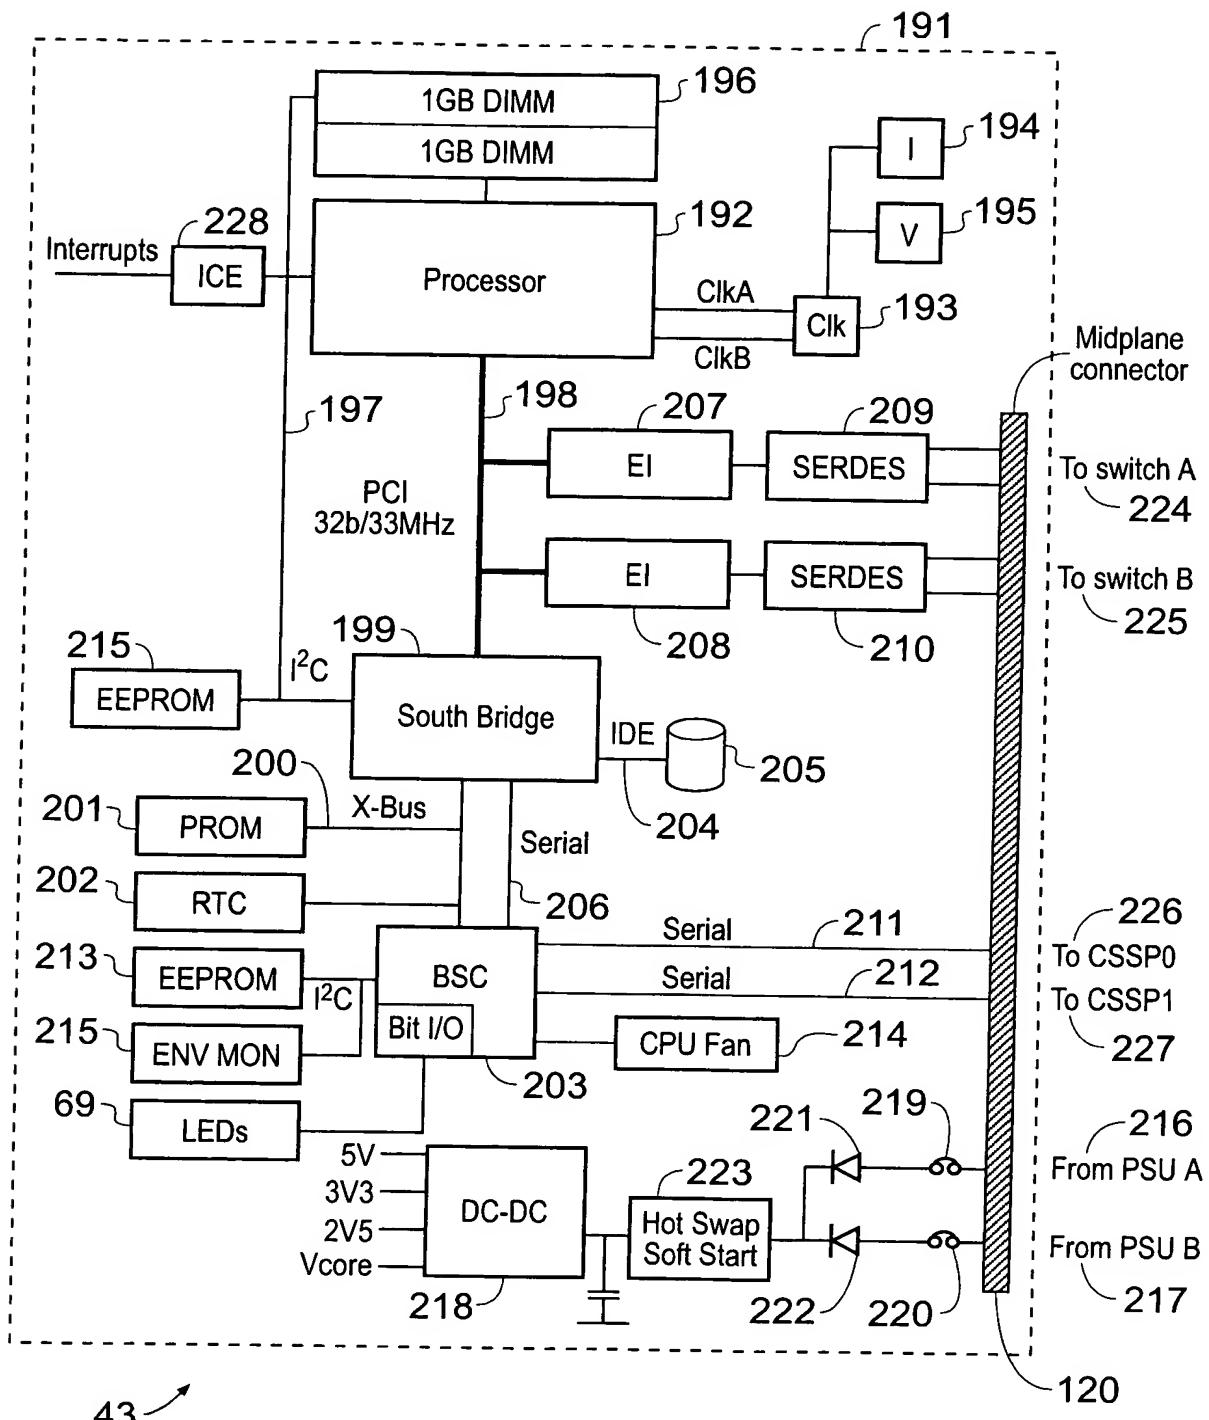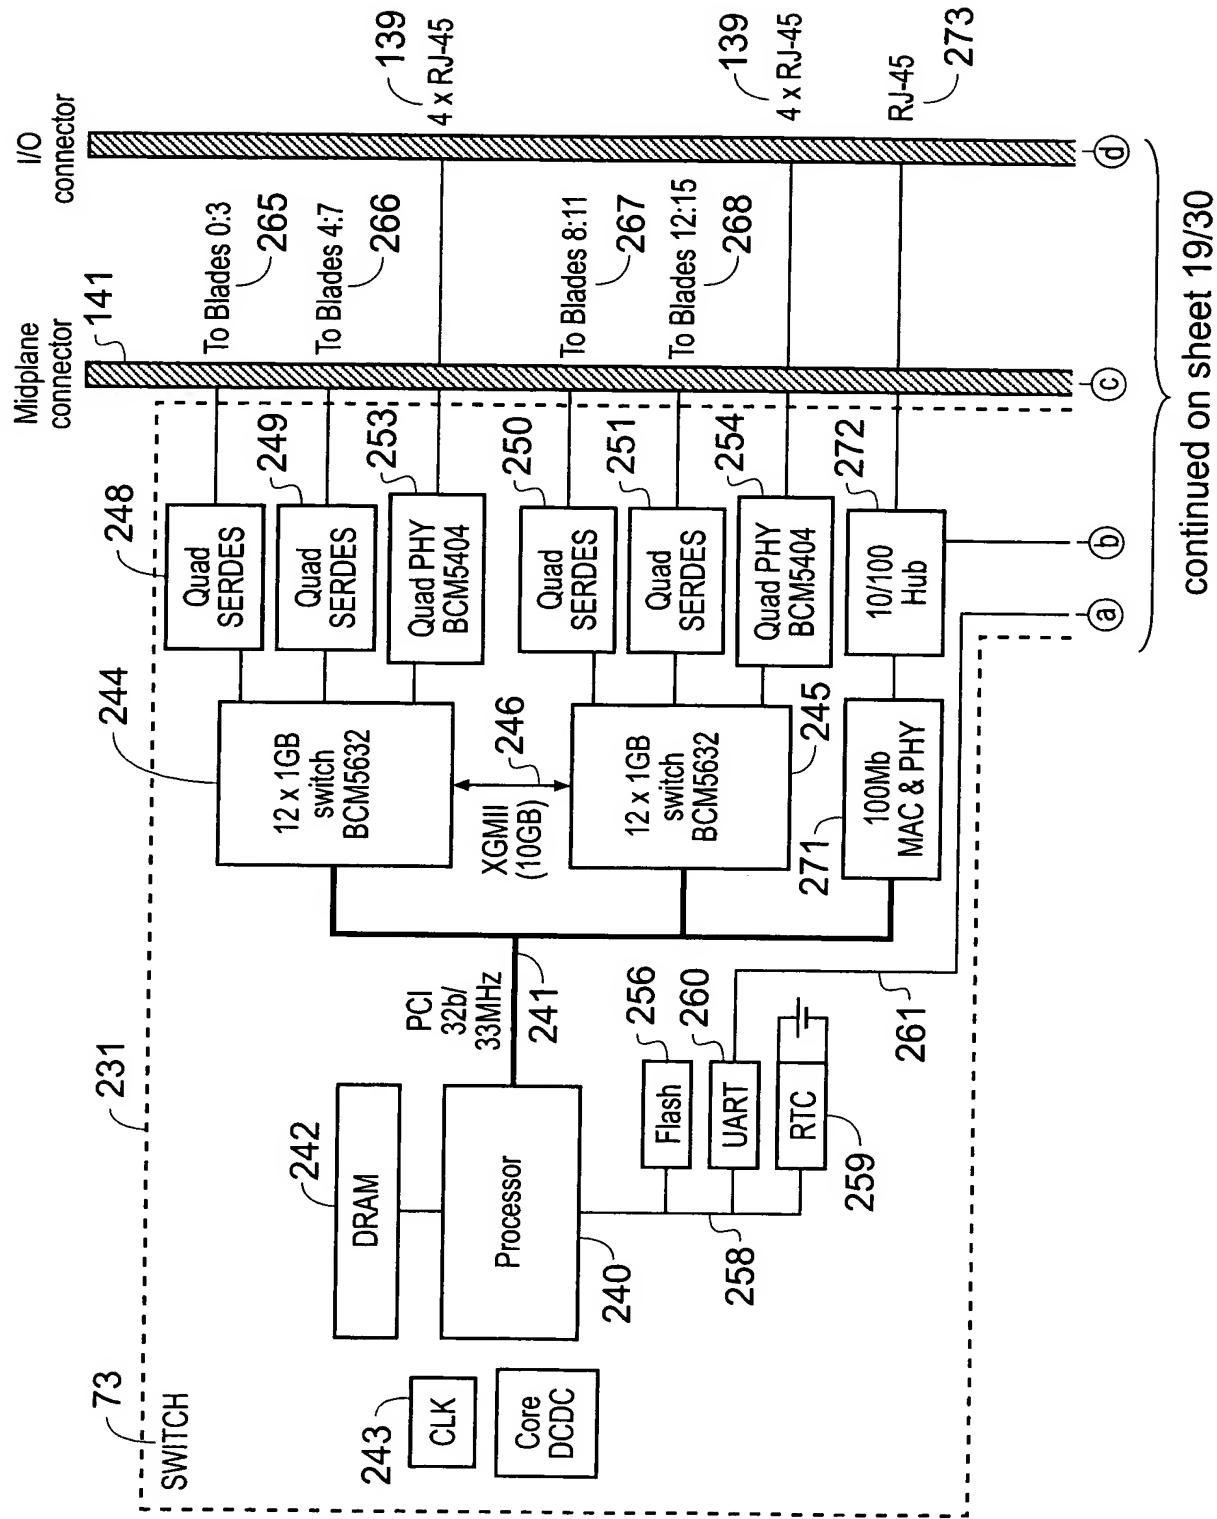

43

Fig. 11



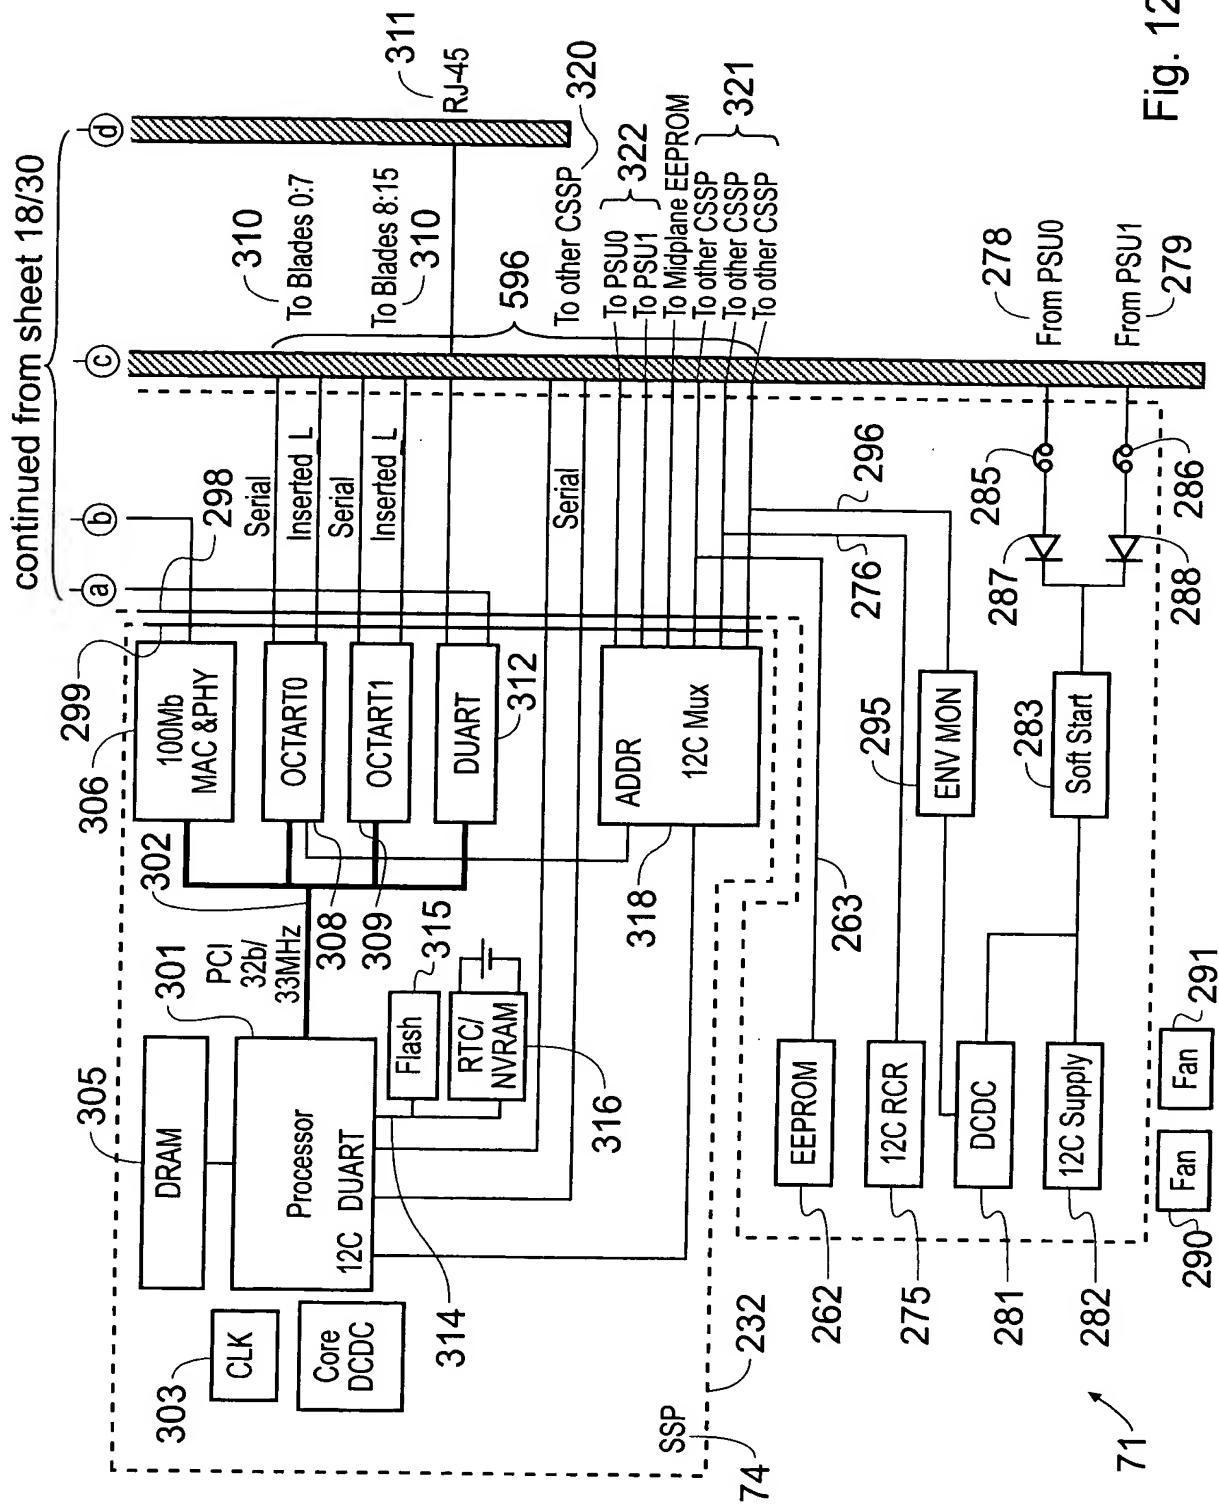


Fig. 12

71 → 290 Fan Fan 291

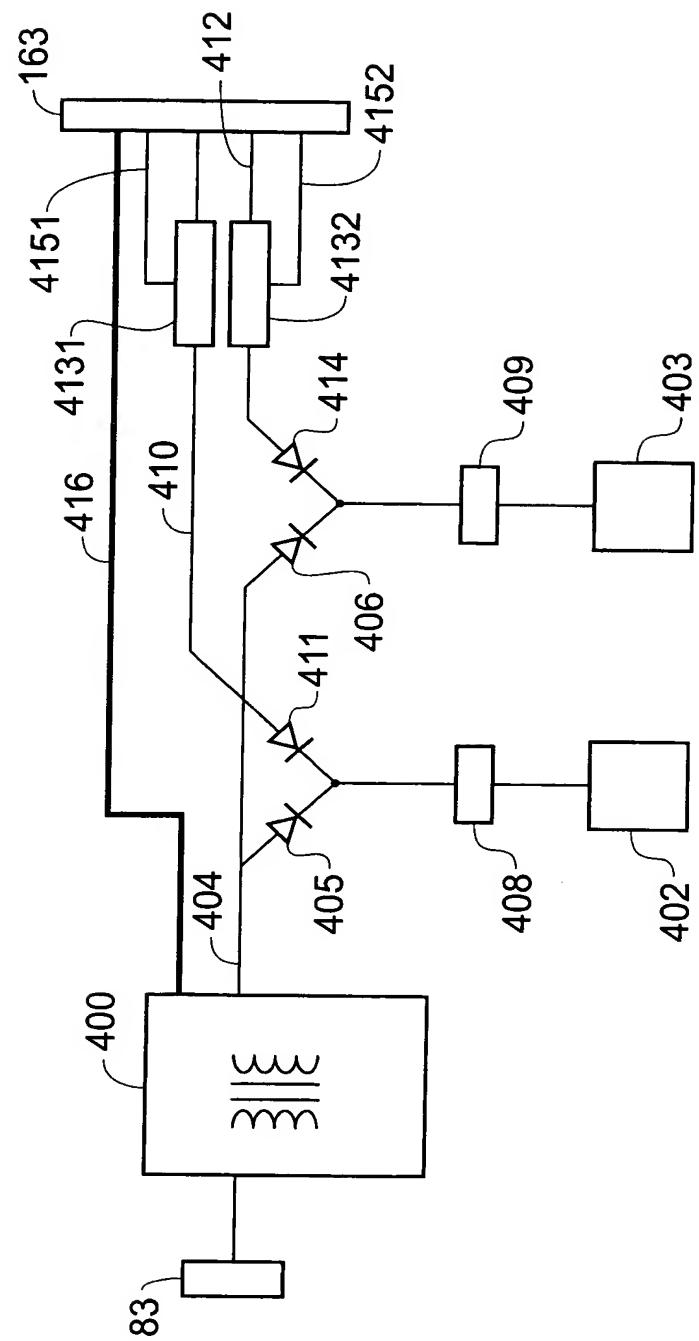


Fig. 13

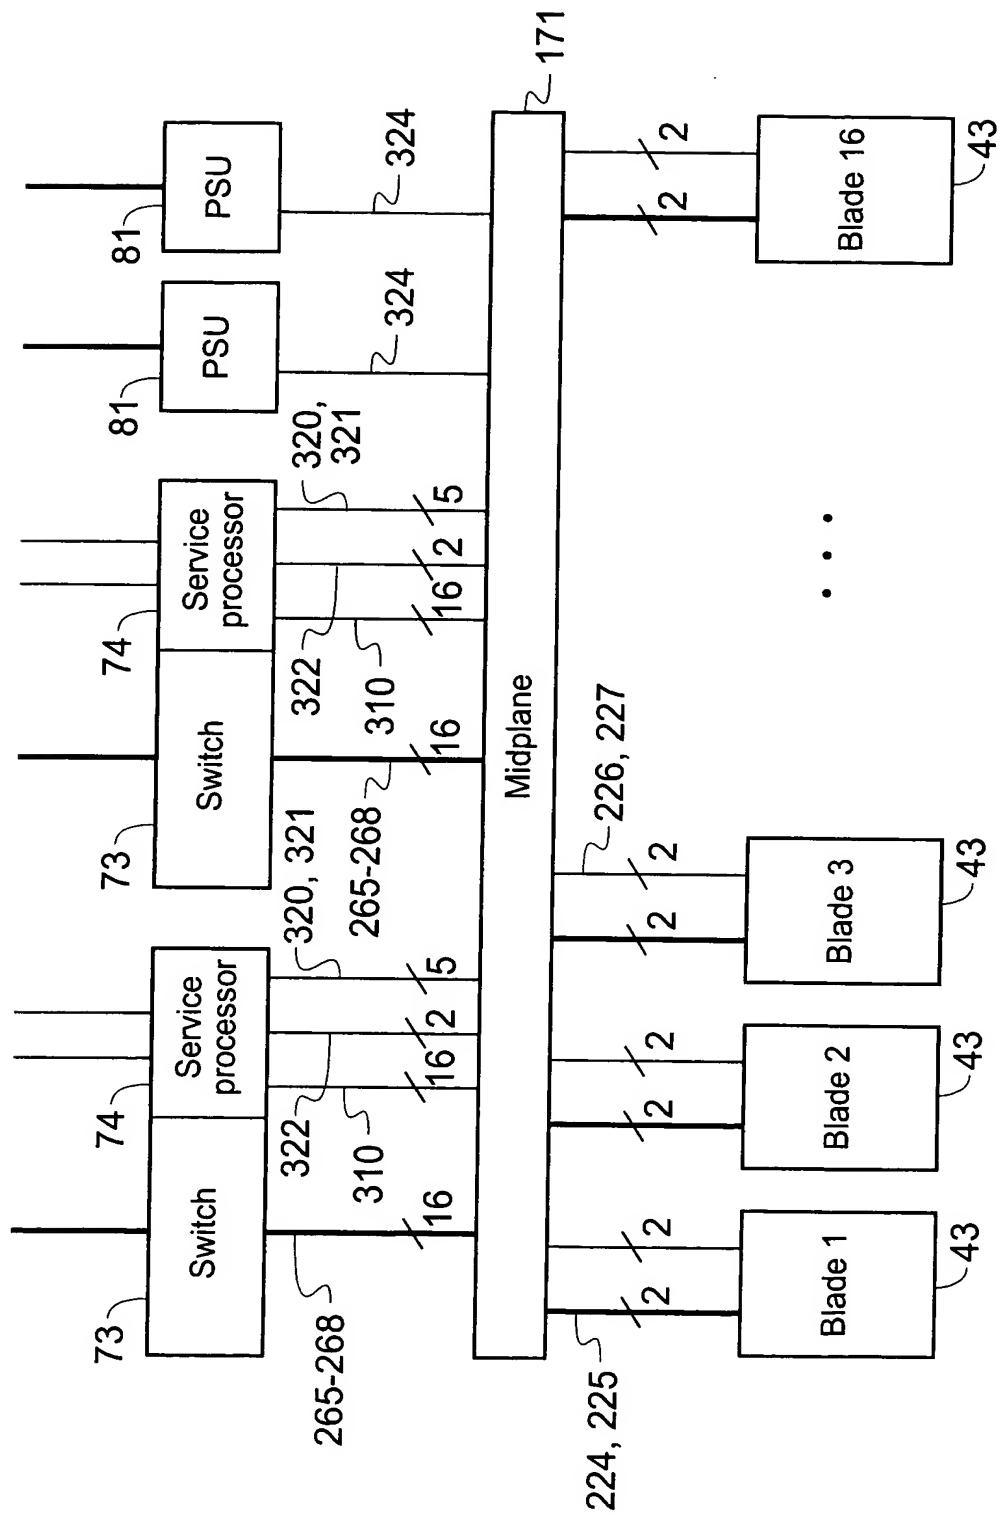


Fig. 14

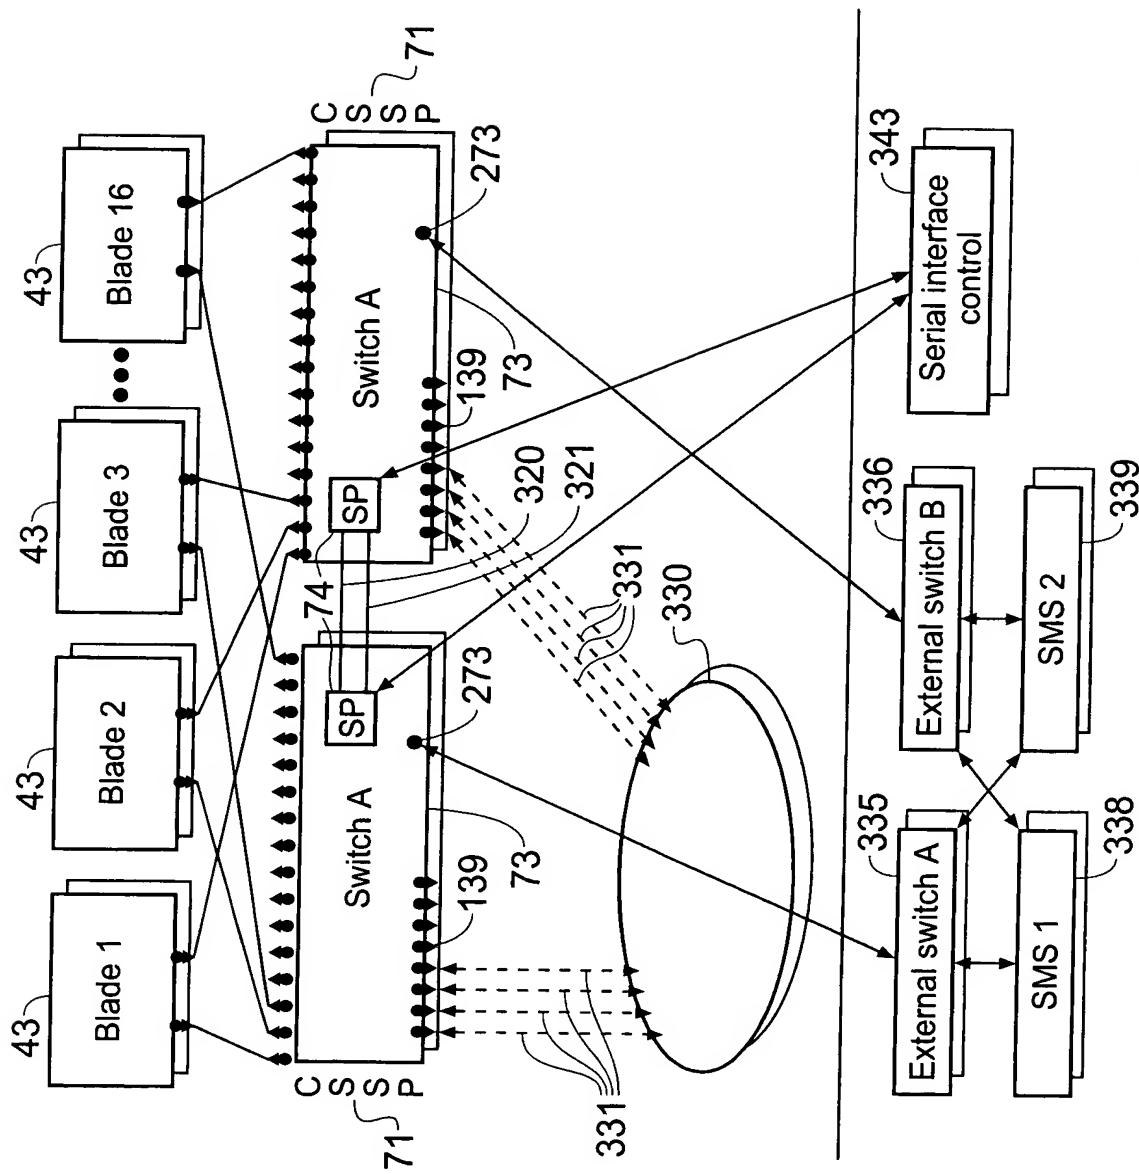


Fig. 15

23/30

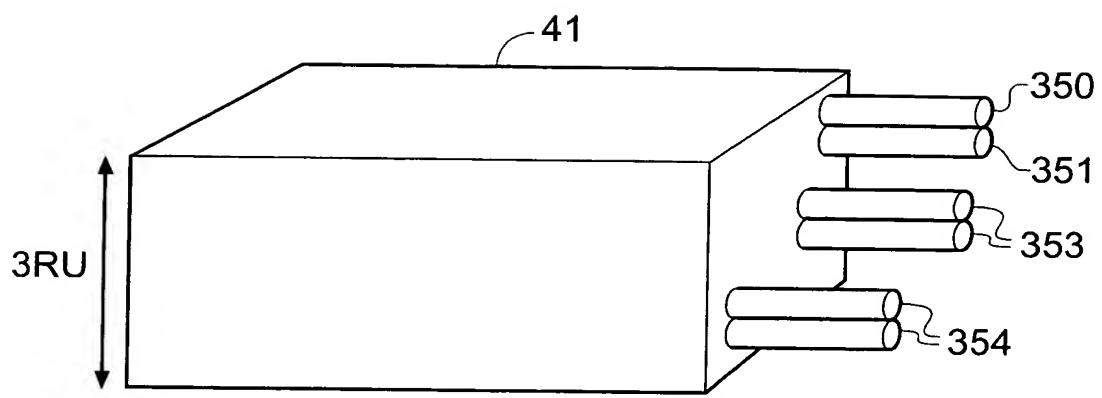


Fig. 16

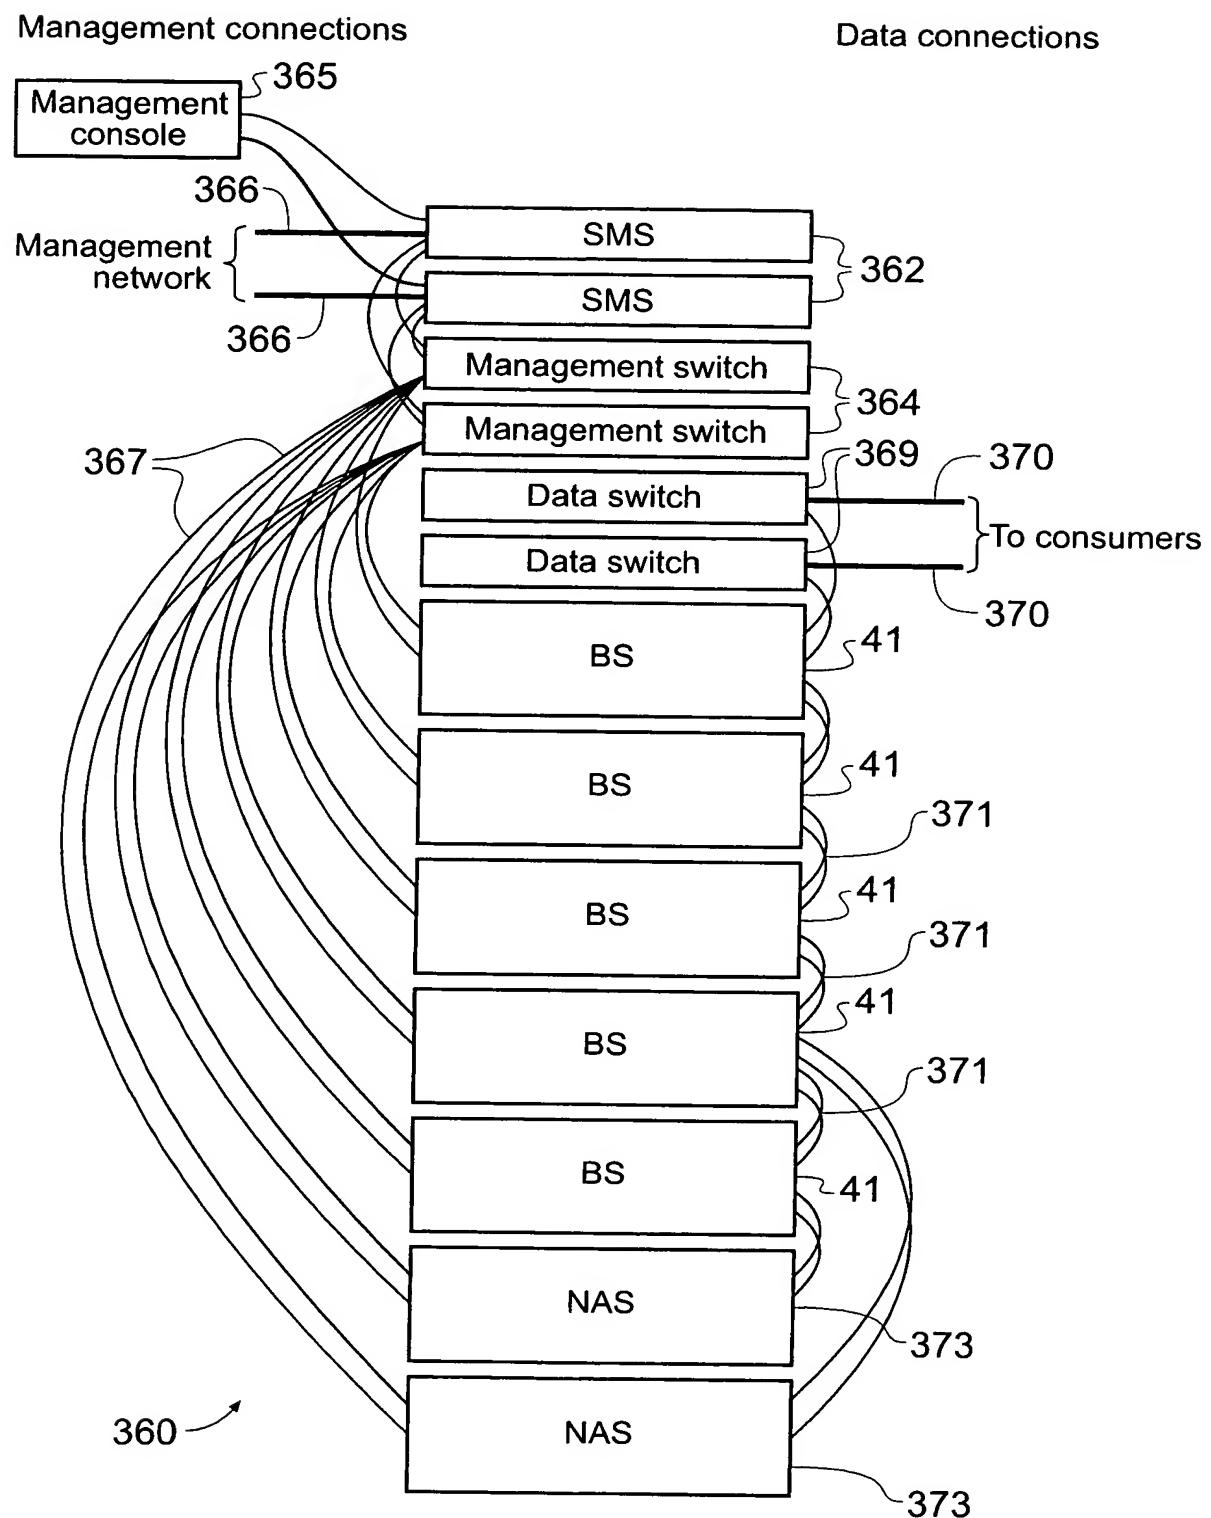


Fig. 17

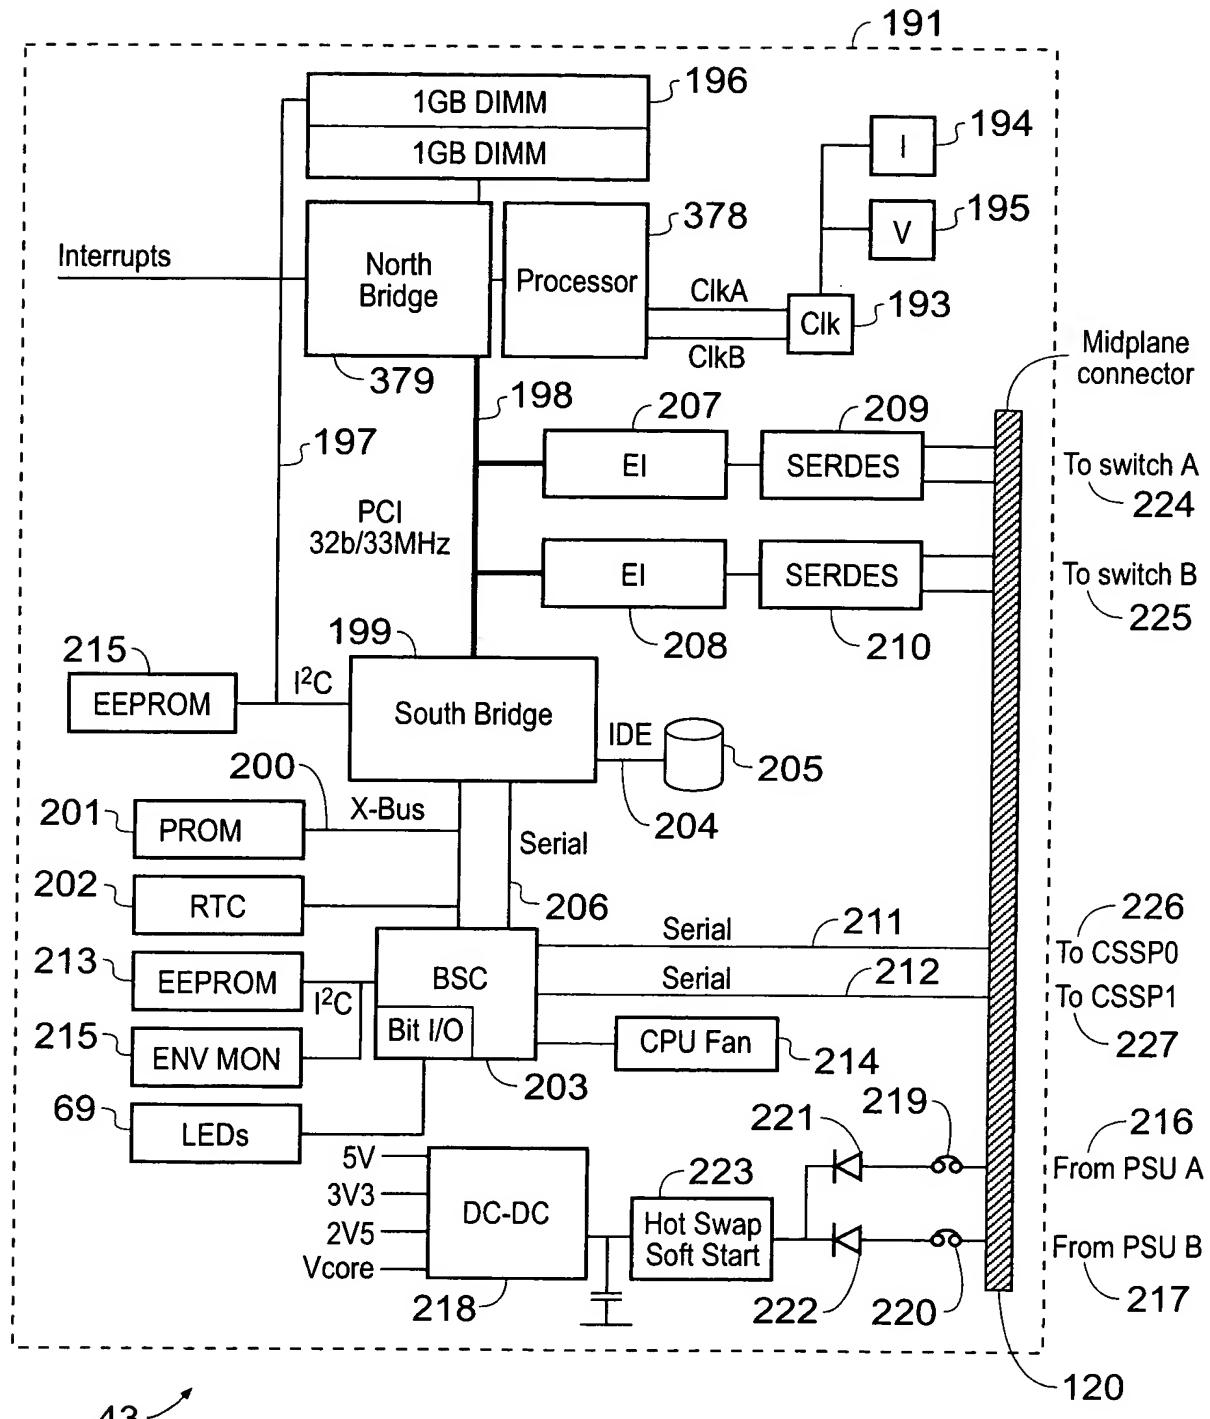


Fig. 18

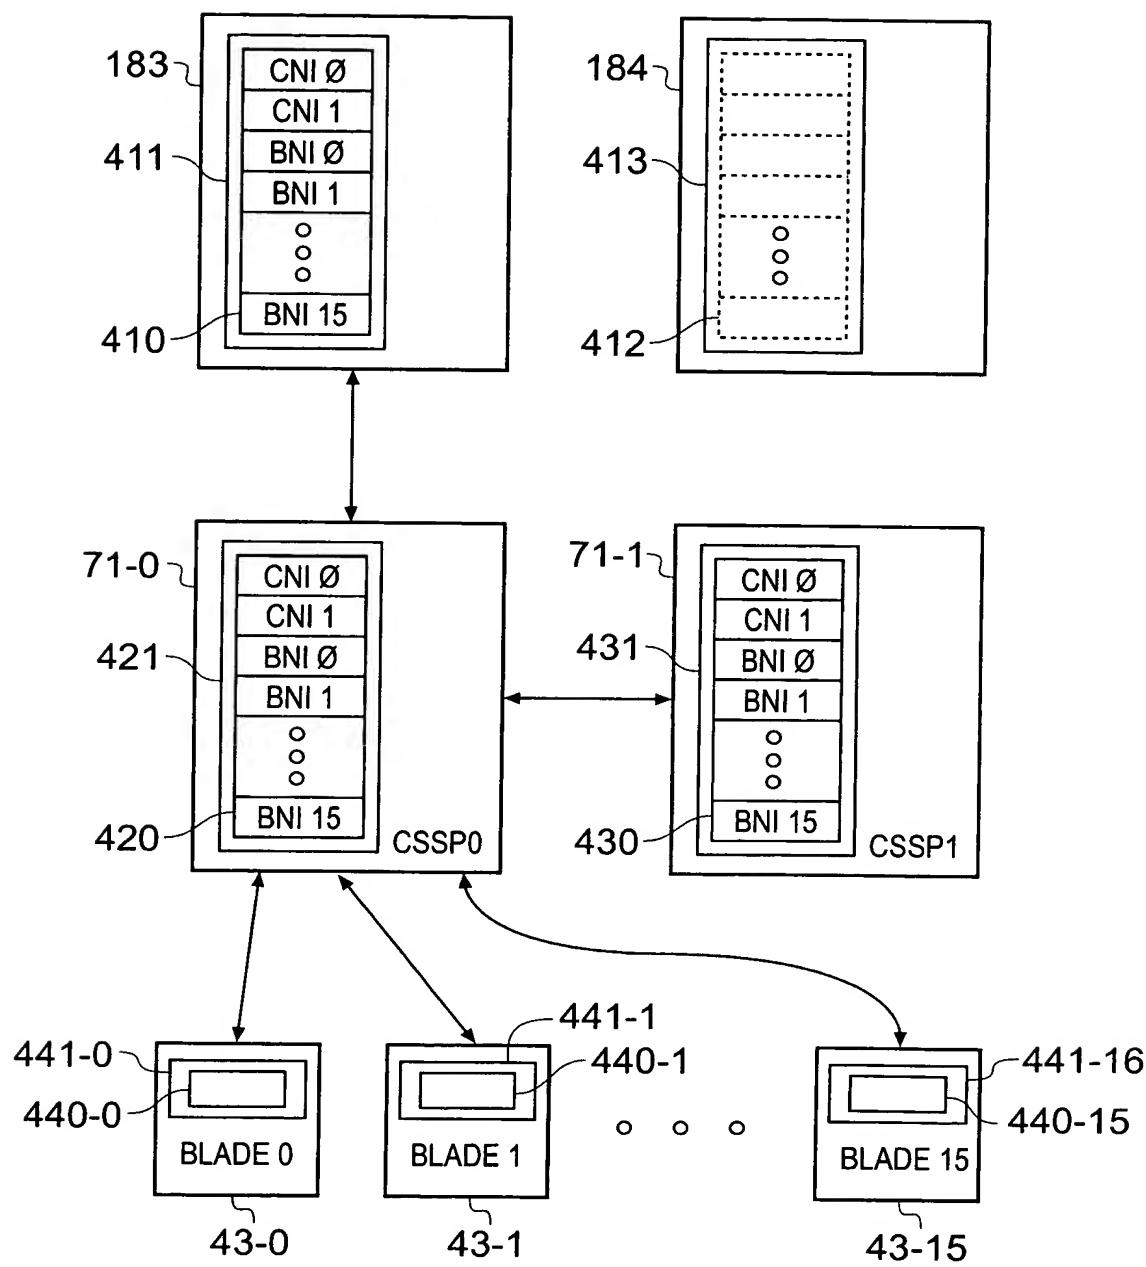


Fig. 19

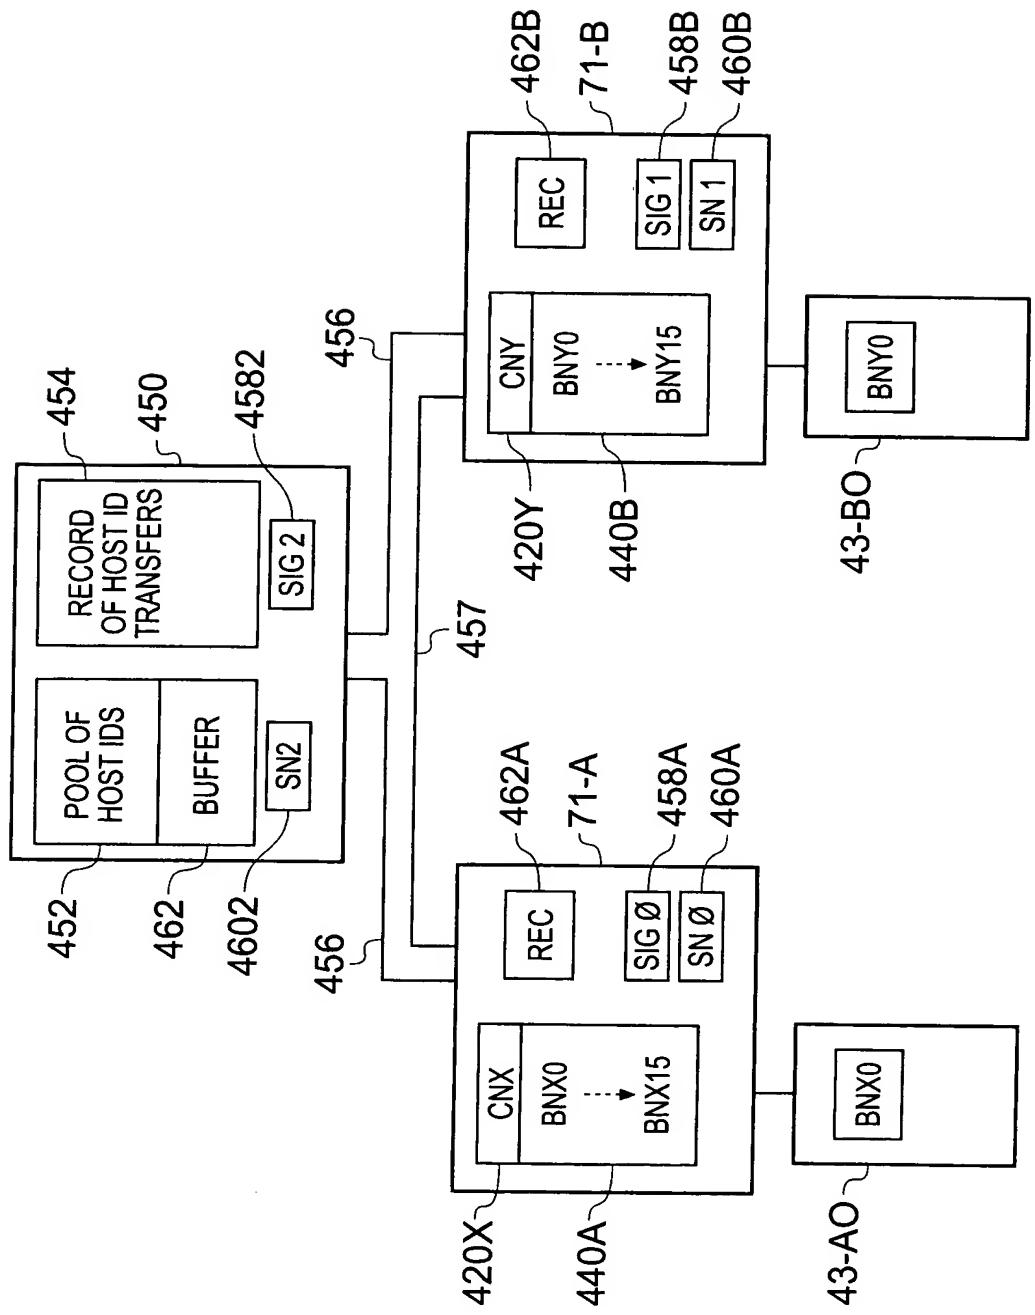


Fig. 20

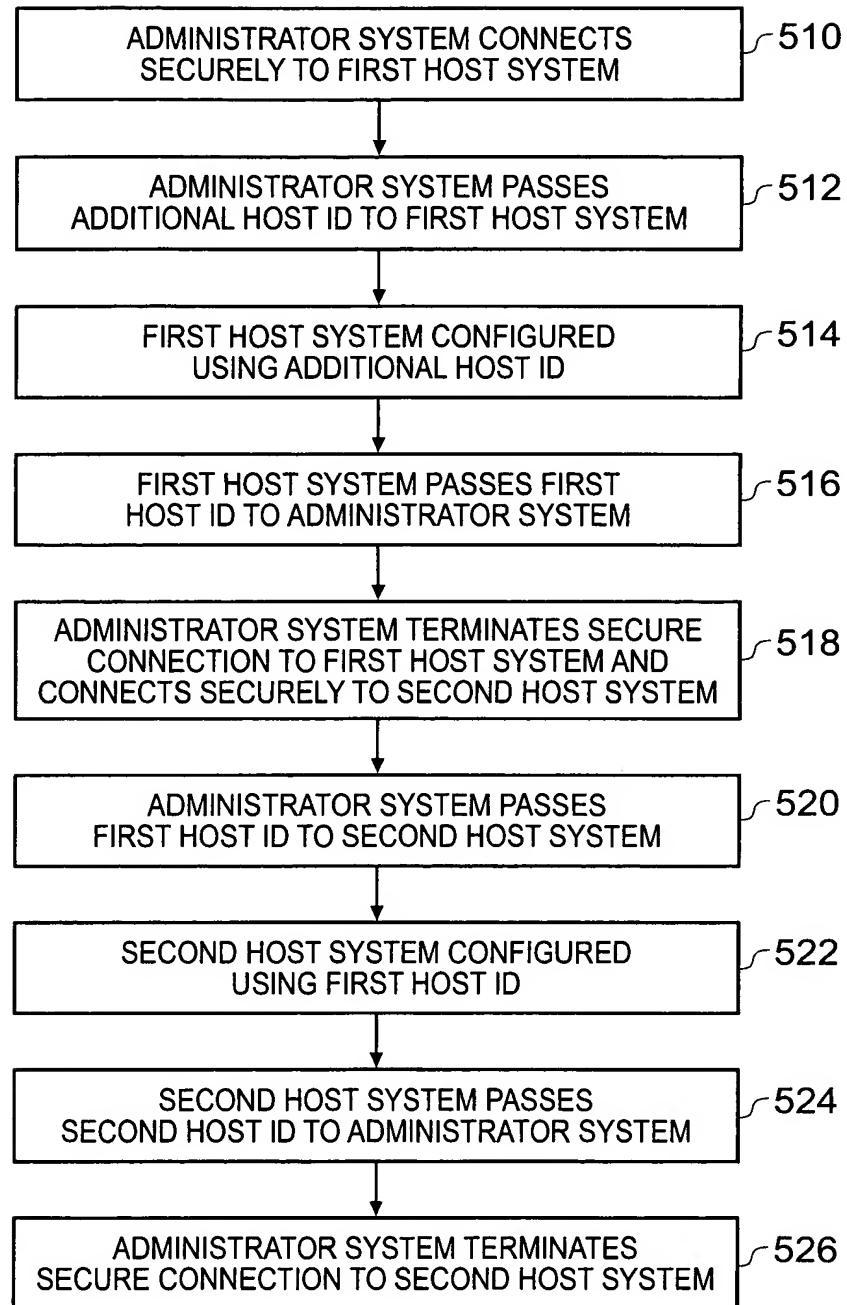


Fig. 20

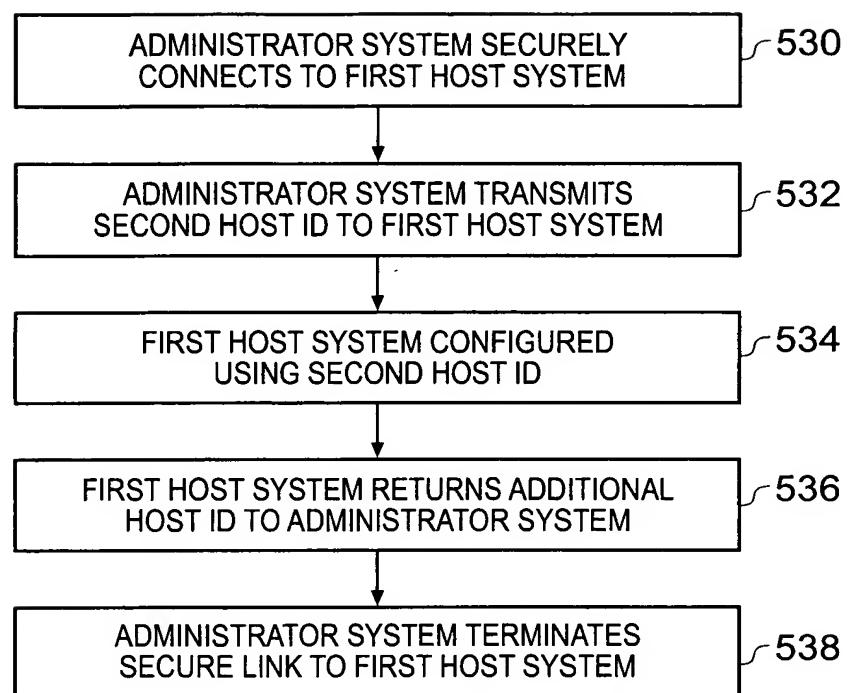


Fig. 22

30/30

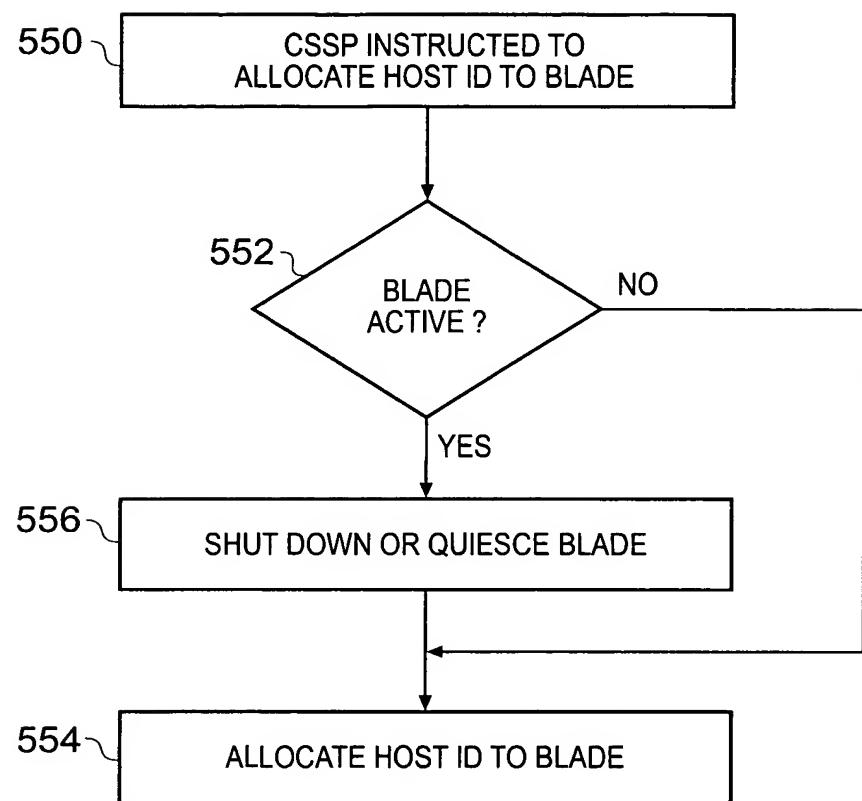


Fig. 23